

## Dear customer,

The fax machine you have purchased prints on plain paper by means of an ink cartridge. It also enables you to use additional devices, such as cordless phones. Your fax machine is also equipped with features that help you install and use it.

## Sending and receiving fax messages

To send a fax message that is more than one page, you can place up to ten pages into the document feeder. In case you run out of paper, faxes are stored until you print them out.

## Connection to a computer and colour printing

Your fax is specially equipped for use with a computer. This means that documents produced on your computer can be printed out with the fax machine, even if they are in colour! Conversely, documents read in with the scanner can be processed on the computer.

## Scanner

Your fax machine comes with a detachable scanner. This enables you to copy and then fax documents that cannot be fed into the fax machine, such as pages out of books and magazines. In addition, this fax machine provides copier features like: multi-page copy, document enlargement and reduction as well as contrast adjustment.

## Additional (cordless) telephones

Your fax machine fully supports the use of additional devices, such as telephones, cordless telephones, external answering machines or any other telecommunication devices suitable. You can transfer calls from the fax machine to a (cordless) telephone and vice versa. You can also start fax reception from an additional phone or stop the built-in answering device—if your fax machine has such a device—to start a telephone conversation.

## Help key

If you press ⓘ twice, your fax machine will print out a page describing the basic functions. It also provides information about additional help pages concerning fax machine use.

## Quick and easy installation

EASY INSTALL will guide you through the installation of your fax machine. Press ⓘ for more than two seconds and a sheet will be printed out. Using this sheet together with the display prompts will aid the installation of your machine. Once you have gone through these steps the machine will automatically configure itself.

## Fax switch and modes ☀ ☾ ⌚

The fax switch separates fax and voice messages. For example, it can receive fax messages silently, i.e. without ringing to avoid causing a disturbance.

The operating modes ☀ and ☾ for day and night operation allow you to decide on different modes during the day and at night; how often the machine should ring prior to receipt of faxes or before the answering machine is turned on; e.g. during daytime it is assumed that calls should ring. After a set time the fax reception is turned on or messages can be left on the (internal or external) answering machine. At night it is assumed that disturbances are minimised. Faxes are then received silently and calls ring more quietly.

The timer ⌚ makes your fax machine switch automatically between ☀ and ☾ modes. The built-in clock makes your fax machine switch to ☾ at 10 pm and back to ☀ at 6 am. Of course you can change these times according to your individual needs or switch off the timer. The display will show the current settings.

! Never expose your fax machine to rain or any other form of moisture, in order to prevent the risk of electric shock or fire.

! In a thunderstorm, disconnect the fax machine from both the mains and the telephone line. If you are unable to disconnect the fax machine, do not use it and do not telephone due to the danger of lightning strike and/or damage to the device.

## Safety instructions

- Please read all warning notices and instructions and follow them precisely.
- Never connect the telephone in damp rooms unless the wall sockets are specially designed for humid conditions. Never touch the power plug, connection to the mains or telephone socket with wet hands.
- Never touch uninsulated or telephone or power cables with damaged insulation, unless the telephone cable is disconnected from the telephone line and/or the power cable is disconnected from the power line.
- Never install the fax machine close to radiators or air conditioners. Avoid operating the fax machine in direct sunlight.
- Place the fax machine on a flat surface and ensure a minimum clearance of 10 cm between the fax machine and other machines and objects.
- Make sure that your fax machine is stable and rests squarely on the supporting surface. Any fall can cause severe damage to the fax machine and/or injury to people, especially small children.
- Make sure that air circulates freely around the fax machine. Do not operate the fax machine in closed boxes, cupboards, cabinets etc. Leave a clear space of 10 cm around the ventilation grilles of the fax machine. Never cover the fax machine (tablecloths, paper, folders etc.). Do not place the fax machine on beds, tablecloths, cushions, sofas, carpets or other soft underlays due to the danger of overheating and subsequent fire.
- Ensure safe cable laying (danger of stumbling, damage to the cable or the fax machine).
- Disconnect the fax machine from the mains and telephone line before cleaning the surface of the machine.
- Never use liquid or gaseous cleaning agents (sprays, scouring agents, polishes etc.).
- Do not allow any liquid to enter the fax machine. Otherwise there is a risk of electric shock or other injury to people and severe damage to the fax machine. If any liquid does enter the fax machine, immediately remove the power plug and have the fax machine professionally inspected.
- If the display breaks, a mildly corrosive liquid may leak out. Avoid contact with skin and eyes.
- In case of any damage caused to the housing of your fax machine in particular to power cables please remove the mains plug and call your service repair centre. The housing of your fax machine may only be opened by authorised service personnel.
- Your fax machine has been tested in conformity with standards EN 60950 and IEC 60950 respectively, and may only be operated with telephone systems and power equipment which meet these standards.

## International guarantee

PHILIPS products have been designed and manufactured to the highest quality standards. If, unfortunately, something should go wrong with this product, PHILIPS guarantees free of charge labour and replacement parts during a period of twelve months from date of purchase. This international PHILIPS guarantee complements the existing national guarantee obligations to you of dealers and PHILIPS in the country of purchase and does not affect your statutory rights as a customer.

The PHILIPS guarantee applies provided the products are handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, dealer's name and model and production number of the product.

The guarantee may not apply if:

- the documents have been altered in any way or made illegible;
- the model or production number on the product has been altered, deleted, removed or made illegible;
- repairs or product modifications and alterations have been executed by unauthorised service organisations or persons;
- damage is caused by accidents including but not limited to lightning, water or fire misuse or neglect;
- damage is caused by a power surge after a power cut.

Please note that the product is not defective under this guarantee in the case where modifications become necessary in order for the product to comply with local or national technical standards which apply in countries for which the product was not originally designed and/or manufactured. Therefore always check whether a product can be used in a specific country.

In case your PHILIPS product is not working correctly or is defective, please contact your PHILIPS dealer. In the event you require service whilst in another country, a dealer address can be given to you by the PHILIPS Consumer Help Desk in that country.

In order to avoid unnecessary inconvenience, we advise you to read the operating instructions carefully before contacting your dealer. If you have questions which your dealer cannot answer or any related question please send these in writing to our address or telephone your customer information service.

PHILIPS cannot be held liable for faulty or incompletely received information.

## Table of contents

|                                           |           |
|-------------------------------------------|-----------|
| <b>Overview .....</b>                     | <b>1</b>  |
| Safety instructions .....                 | 2         |
| International guarantee .....             | 2         |
| <b>I Introduction .....</b>               | <b>3</b>  |
| Overview of the machine .....             | 4         |
| Description of machine .....              | 4         |
| General view of functions .....           | 5         |
| Location of controls .....                | 6         |
| <b>2 Installation .....</b>               | <b>8</b>  |
| Location .....                            | 8         |
| Connecting the fax machine .....          | 8         |
| Inserting a cartridge .....               | 9         |
| Changing the cartridge .....              | 9         |
| Loading paper .....                       | 10        |
| Paper jam .....                           | 11        |
| Easy Install .....                        | 11        |
| Connecting additional devices .....       | 11        |
| Private branch exchange - Line type ..... | 12        |
| Computer connection .....                 | 13        |
| <b>3 Basic settings .....</b>             | <b>14</b> |
| HELP function .....                       | 14        |
| Time and date .....                       | 14        |
| Entering your number .....                | 14        |
| Entering your name .....                  | 14        |
| Correction .....                          | 14        |
| Language of display .....                 | 15        |
| Type of ring signal .....                 | 15        |
| Volume of the ring signal .....           | 15        |
| Volume of the loudspeaker .....           | 15        |
| <b>4 Fax switch .....</b>                 | <b>16</b> |
| Setting the mode ☀☾ .....                 | 16        |
| Special settings .....                    | 17        |
| Mode ☺ .....                              | 17        |
| EASYLINK .....                            | 17        |
| External answering machine .....          | 18        |
| <b>5 Telephone .....</b>                  | <b>19</b> |
| Making a call .....                       | 19        |
| Redial .....                              | 19        |
| Short dial ☐ 0-9 .....                    | 19        |
| Telephone book ☐ A-Z .....                | 19        |
| List of telephone numbers .....           | 20        |
| Call transfer .....                       | 20        |
| Hands-free operation* .....               | 20        |
| Mute .....                                | 20        |
| Calling line identification .....         | 20        |


|                                           |           |
|-------------------------------------------|-----------|
| <b>6 Fax .....</b>                        | <b>21</b> |
| Feeding documents in .....                | 21        |
| Sending faxes .....                       | 21        |
| Broadcast .....                           | 21        |
| Image quality .....                       | 22        |
| Transmission report - error report .....  | 22        |
| Overseas function -Transmission .....     | 22        |
| Size compression .....                    | 22        |
| Fax journal .....                         | 22        |
| Polled reception .....                    | 22        |
| Polling send .....                        | 23        |
| Send later .....                          | 23        |
| Paperless fax reception .....             | 23        |
| <b>7 Copier - Scanner - Printer .....</b> | <b>24</b> |
| Copying .....                             | 24        |
| Copying with the scanner detached .....   | 24        |
| Scanning into the PC .....                | 25        |
| Colour printing .....                     | 26        |
| Contrast .....                            | 26        |
| <b>8 Answering machine* .....</b>         | <b>27</b> |
| Switching on and off .....                | 27        |
| Recording a message .....                 | 27        |
| Duration of recording .....               | 27        |
| Listening to messages .....               | 27        |
| Play back volume .....                    | 27        |
| Deleting messages .....                   | 27        |
| Forwarding messages .....                 | 28        |
| Recording a conversation .....            | 28        |
| VIP code .....                            | 28        |
| Memo .....                                | 28        |
| Remote control .....                      | 29        |
| <b>9 Hints &amp; Tips .....</b>           | <b>30</b> |
| Service code .....                        | 34        |
| Care and maintenance .....                | 34        |
| Clean the scanner glass .....             | 34        |
| Cartridge .....                           | 35        |
| <b>10 Appendix .....</b>                  | <b>36</b> |
| Technical data .....                      | 36        |
| Glossary .....                            | 36        |
| <b>Index .....</b>                        | <b>37</b> |

\* only for fax machine with built-in answering machine

## Overview of the machine



The following items are included in the packaging:


- |                             |                                    |
|-----------------------------|------------------------------------|
| 1 Telephone cable with plug | 8 Document support                 |
| 2 Mains cable with plug     | 9 Installation guide               |
| 3 Ink cartridge (black)     | 10 User manual                     |
| 4 Handset                   | 11 CD-Rom for connection to the PC |
| 5 Spiral cable for handset  |                                    |
| 6 Paper tray                |                                    |
| 7 Fax machine               |                                    |

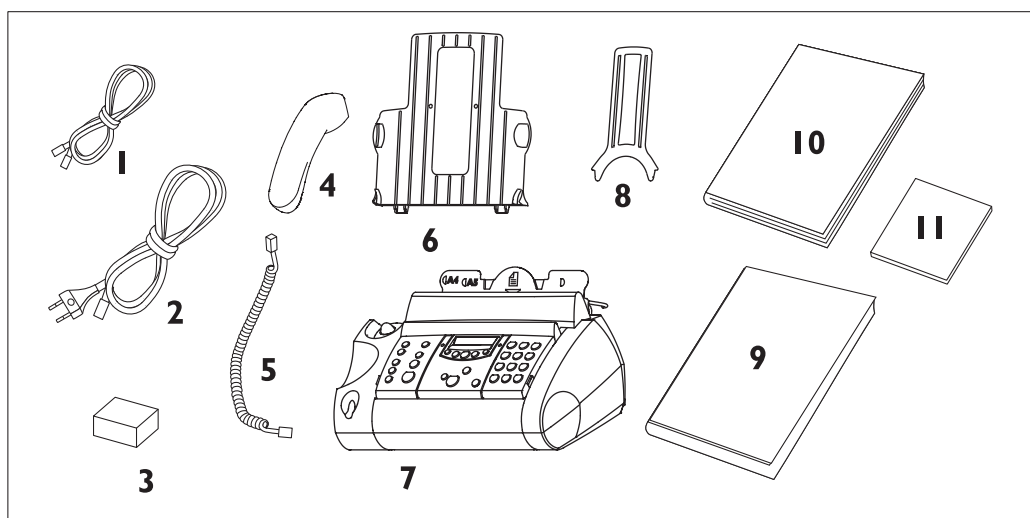

## Description of machine

- |                               |                                          |
|-------------------------------|------------------------------------------|
| 1 Mains cable with power plug | 6 Paper feed flap and document feed slot |
| 2 Telephone handset           | 7 Lever for paper ejection               |
| 3 Operation panel             | 8 Scanner                                |
| 4 Paper tray                  | 9 Holder with ink cartridge              |
| 5 Document support            |                                          |

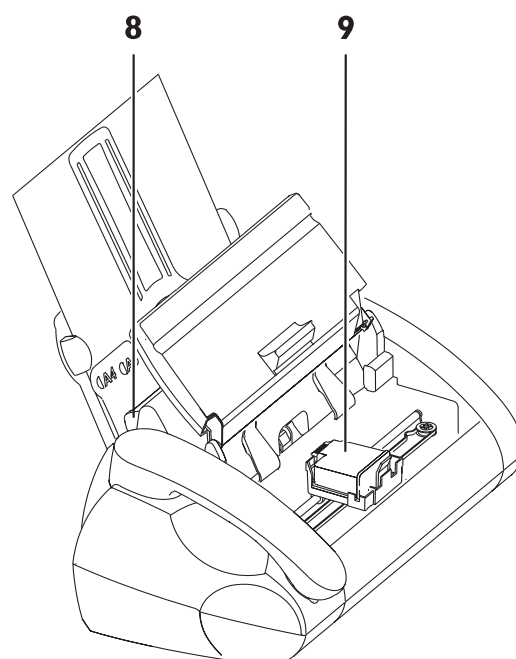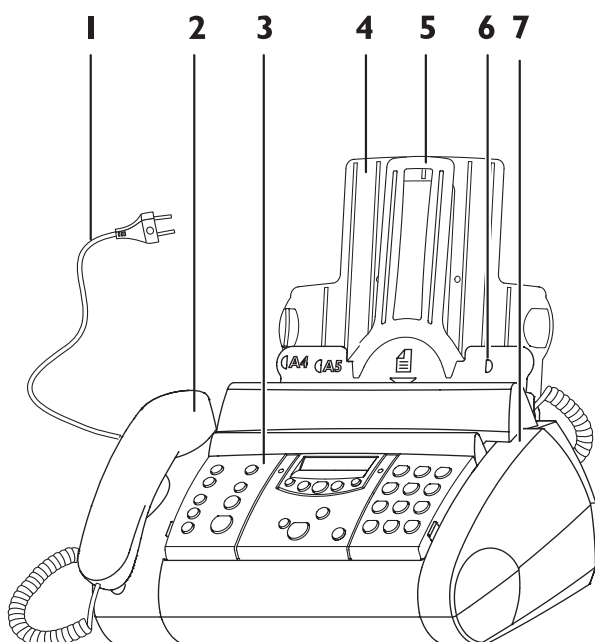

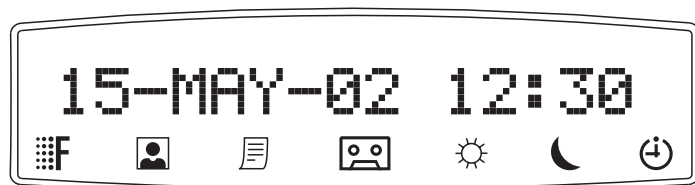

The symbols on the display indicate the current operating status:

### **FINE**

indicates whether you are sending or copying with a higher picture quality or with grey tones. If neither of the two symbols is visible, the standard resolution is selected. To change the resolution press FINE/PHOTO.



is visible when the memory contains faxes.



shows that the built-in answering machine is switched on.



Three symbols on the display indicate the current settings. You can choose the mode desired with the key .

\*) only for fax machine with built-in answering machine

## General view of functions

You can print out a list of functions by pressing MENU three times.

| I Setup                                                                                | Page   | 4 Others                                                                                                                 | Page |
|----------------------------------------------------------------------------------------|--------|--------------------------------------------------------------------------------------------------------------------------|------|
| 11 Set Language<br>(select the language of the display text) .....                     | 15     | 41 Fax journal<br>(log of the last ten fax documents received and sent) ...                                              | 22   |
| 12 Set time/date<br>(setting time and date) .....                                      | 14     | 42 Dialling list<br>(print out of stored names and numbers) .....                                                        | 20   |
| 13 Your telephone number<br>(enter your telephone number) .....                        | 14     | 43 Transmission report<br>(automatic print out of transmission protocols) .....                                          | 22   |
| 14 Your name<br>(enter your name) .....                                                | 14     | 44 Ringer types<br>(selection between ten ringer types) .....                                                            | 15   |
| 15 Line type<br>(setting the private branch exchange) .....                            | 12     | 45 Service code<br>(deleting personal settings) .....                                                                    | 34   |
| 2 Fax                                                                                  |        | 46 Size compression<br>(size compression of received fax messages) .....                                                 | 22   |
| 21 Transmission speed/overseas function<br>(setting for half-speed transmission) ..... | 22     | 47 Set contrast<br>(setting of contrast for copy / fax transmission) .....                                               | 26   |
| 22 Polled reception<br>(you can call up fax messages) .....                            | 22     | 48 Clean cartridge<br>(Cleaning the cartridge) .....                                                                     | 35   |
| 23 Polling send<br>(your fax message can be fetched) .....                             | 23     | 49 New cartridge<br>(Resetting copy counter) .....                                                                       | 35   |
| 24 Send later<br>(faxes will be sent later) .....                                      | 23     | 5 Answering machine*                                                                                                     |      |
| 25 Broadcast<br>(same fax will be sent to more than one party) .....                   | 21     | 51 Recording time<br>(setting for recording duration of calls) .....                                                     | 27   |
| 3 Fax switch                                                                           |        | 52 Access code<br>(setting the code for the remote control of the<br>answering machine and for message forwarding) ..... | 29   |
| 31 Day<br>(setting the DAY operating mode ) .....                                      | 16     | 53 VIP code<br>(authorised callers can override<br>the answering machine) .....                                          | 28   |
| 32 Night<br>(setting the NIGHT operating mode ) .....                                  | 16     | 54 Memo mode<br>(message for the caller without the<br>possibility to leave a message) .....                             | 28   |
| 33 Timer<br>(setting the TIMER operating mode ) .....                                  | 17     | 55 Forwarding<br>(messages forwarded to<br>another telephone number) .....                                               | 28   |
| 34 Easylink<br>(codes for use with additional telephones) .....                        | 17, 18 |                                                                                                                          |      |

\* for fax machines with built-in answering machine

## Location of controls

### FINE / PHOTO

to select a higher resolution when copying or sending  
(for text and graphics - FINE; for photographs - PHOTO)

### CLEAR

**press briefly:** to delete messages / entries / individual symbols

**press and hold** (two seconds): to cancel the whole entry

### STOP

stops procedures

### START/COPY

**press briefly:** to start fax transmission or to copy a document


**press and hold** (two seconds): to multiple copy an inserted document / rapid call-up of faxes

### Display lamp

If this lamp flashes, please read the message on the display.

### Lamp for answering device

The lamp flashes when new messages or memos have been recorded. After the messages have been played back, the lamp flashes and keeps being on until the messages have been deleted.

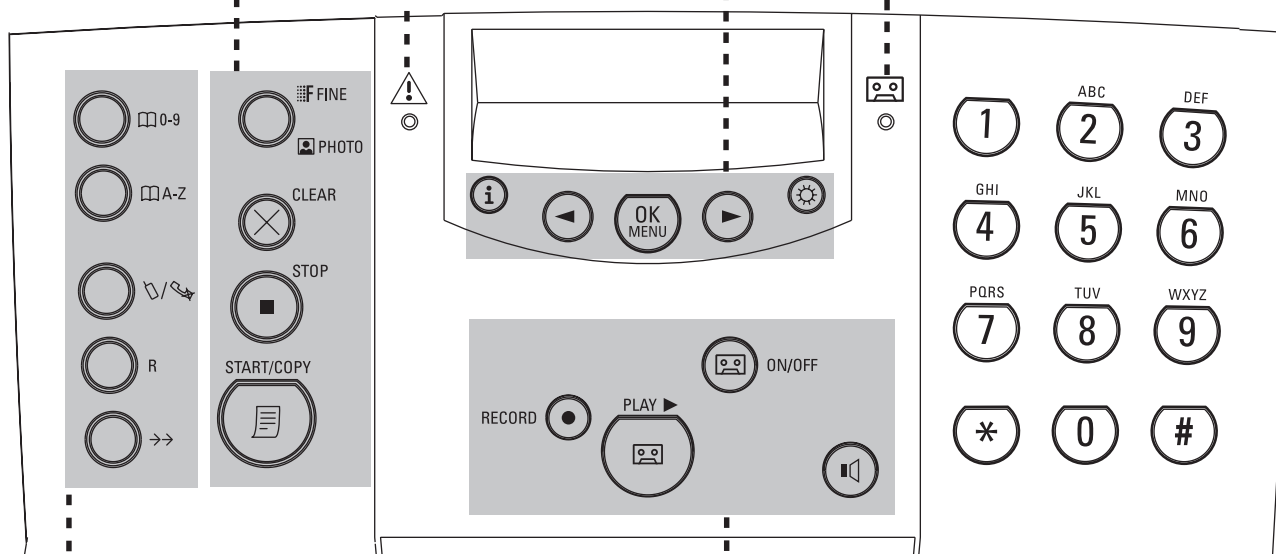

### 0-9

**press briefly:** to select a phone number quickly

**press and hold** (two seconds): to store a telephone number

### A-Z

**press briefly:** to call up a name entry

**press and hold** (two seconds): to store a name entry



temporary mute of microphone during a call / transferring a call from the fax machine to another telephone (only for serial connections, see Glossary)

### R

**press briefly:** for special functions, e. g. for the use with a private branch exchange and for using various functions provided by your service provider (call waiting etc.)

**press and hold:** to insert a dialling pause between two figures



**press briefly:** to repeat the last five numbers you have dialled

**press and hold** (two seconds): to browse the list of callers



**press briefly** (twice): print operating instructions for the most important functions with references to additional help pages  
**press and hold** (two seconds): to start the automatic installation of your fax machine / printout of Easy Install



to select options / to adjust the volume / to move cursor to left of display

### **OK/MENU**

for calling up functions / to confirm entries



to select options / to adjust the volume / to insert a space when entering a name / to move cursor to the right of the display



to select the different operation modes

**press briefly**: to choose between  and 

**press and hold** (two seconds): operating mode  on/off

### **DIAL/📞**

for dialling without lifting the handset. For devices with built-in answering machine also for hands-free operation.

**for fax machine with built-in answering device:**

### **ON/OFF**

to activate / deactivate answering machine

### **RECORD**

**press briefly**: to record an internal memo

**press and hold** (two seconds): to record a new outgoing message

### **PLAY ▶**

to play back messages



# 2 Installation

- ! Neither telephone nor fax will operate during power failure.
- ! Your fax machine was built for exclusive use in the country of purchase. It complies with the local network specifications.

## Location


- 1 The fax machine must stand securely on a smooth, flat, horizontal surface (no soft surface such as carpets etc.).
- 2 Avoid exposure to direct sunlight (the cartridge is heat-sensitive) and close proximity with heaters, radios and TV sets, air conditioning vents, dust, water and chemicals - is not advised.
- 3 Avoid heat build-up by ensuring that the machine is not covered. Place the fax in such a way as to ensure free circulation of air around it.
- 4 If you would like to use a cordless phone, there should be a distance of at least 15 cm in between the fax machine and the base station, otherwise you may hear acoustic interference in your handset.

## Connecting the fax machine


### To the telephone socket

Connect the telephone cable to the fax machine by inserting it in the socket **on the bottom of the machine** identified with **LINE**. Insert the cable in the groove provided.

In the UK

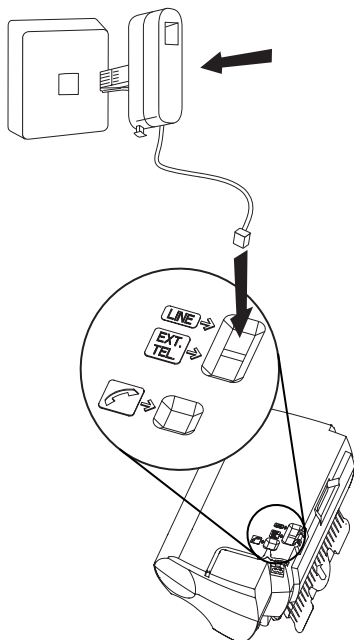


For all other countries

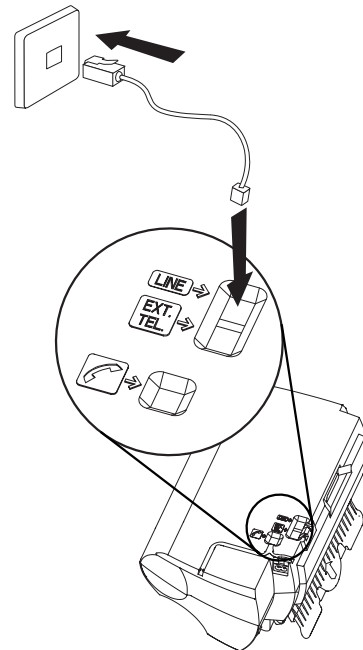


### Handset to the fax machine

Insert one end of the spiral cable into the socket of the handset and the other end of the spiral cable into the socket identified with a handset symbol, **on the bottom of the machine**, and press it into the specially provided cable groove.

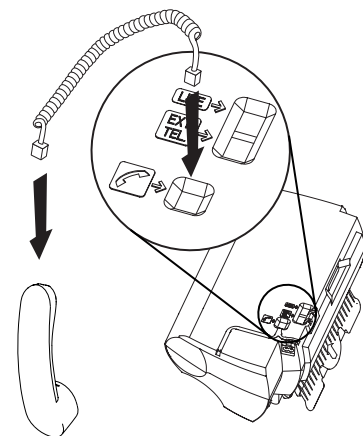

### To the power supply

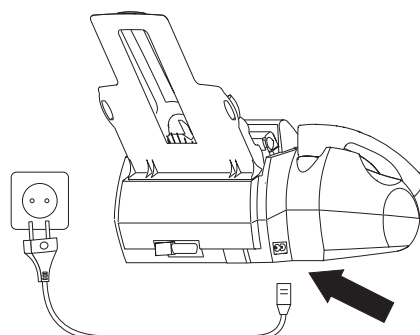




## Inserting a cartridge

Before you can receive or copy documents, there has to be an ink cartridge in your fax machine. For this reason a free cartridge for a number of test pages has been included with your machine.


If the cartridge is empty or if there is no cartridge in the fax machine, the red indicator light  flashes and the display shows:

CARTRIDGE EMPTY

- 1 Follow the instructions on the cartridge box.
- 2 Please use only the original Philips ink cartridges PFA 421 (black) or PFA 424 (colour).
- 3 Open the operation panel by lifting it at the sides by the grip recesses.

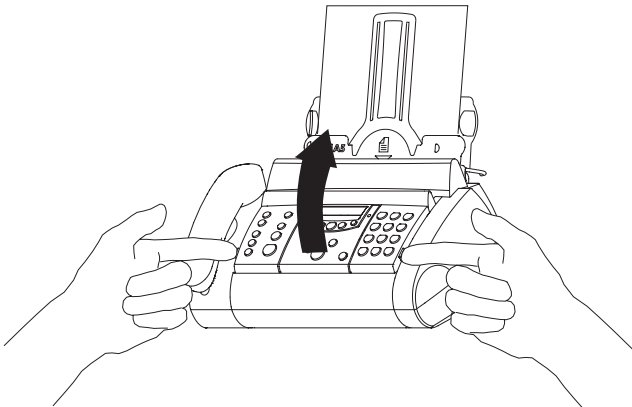


- 4 Take the ink cartridge out of its packaging and pull off the protective strip.

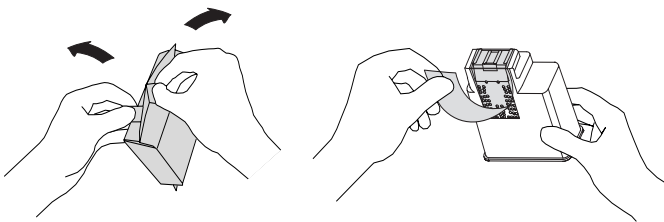


- ! For use with Philips cartridges only!
- ! Be careful not to touch the nozzle and the contacts.

- 5 Insert the cartridge with the coloured end forwards and the contacts downwards in the holder. If it has been inserted correctly, you will hear a click and the rod in the centre snaps home.

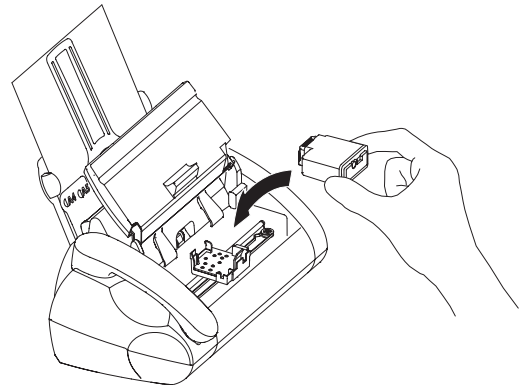

- 6 Close the fax, by folding the operation panel forwards until it snaps home.

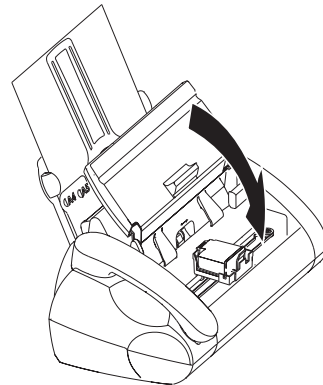

- 7 The display will show

CARTR. NEW: YES


Confirm with OK.

## Changing the cartridge


If your ink cartridge is empty, the red display lamp  will flash and the display will show

CARTRIDGE EMPTY


- 1 Open the operation panel by lifting it at the sides by the grip recesses.

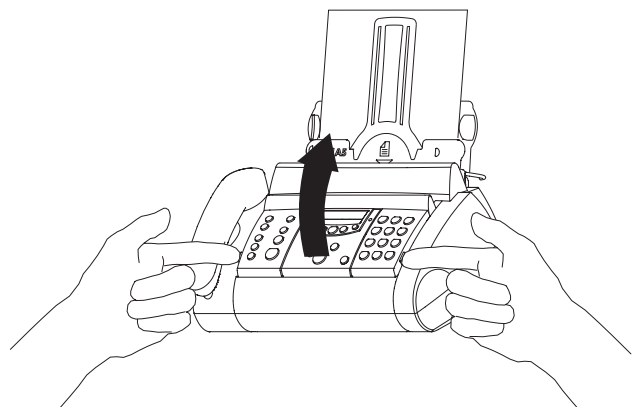


**2** Press the rod in the centre of the holder forwards.

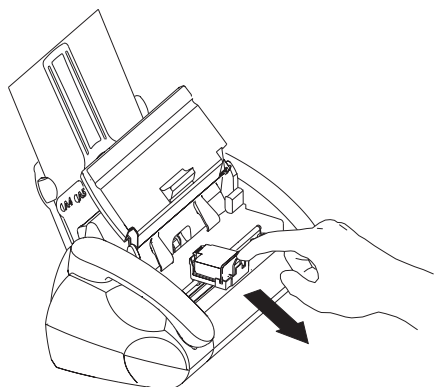


**3** Remove the cartridge by pulling forwards at an angle and lifting it up and out. It cannot be reused. Dispose of the ink cartridge with normal waste.

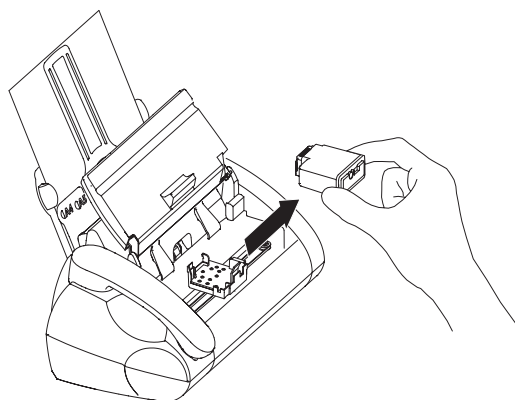

**4** Insert the new cartridge.

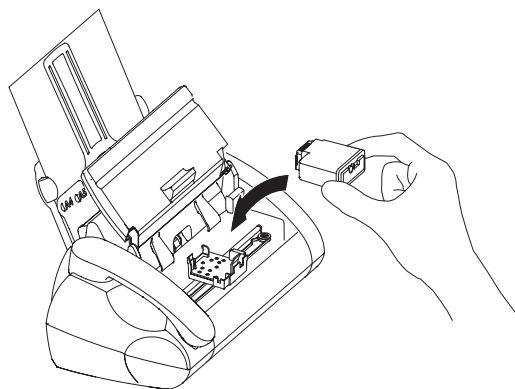

**5** Close the operation panel.

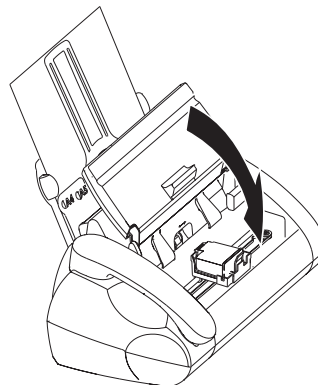

**6** The display will show

CARTR. NEW: YES

Confirm with **OK**.


If your fax machine does not ask you automatically, after the new cartridge has been inserted, you can reset the copy counter in function 49 (see chapter Hints&Tips).

## Loading paper


**1** Please use only paper which is specifically intended for use with ink cartridge printers (standard format: A4—210 x 297 mm, 80 g/m<sup>2</sup>).

- ! Please follow the instructions of the manufacturer.
- ! When using glossy paper it may take longer to dry.
- ! Avoid exposing the printed documents to direct sunlight.

**2** Insert the paper tray in the slots provided behind the paper feed mechanism.

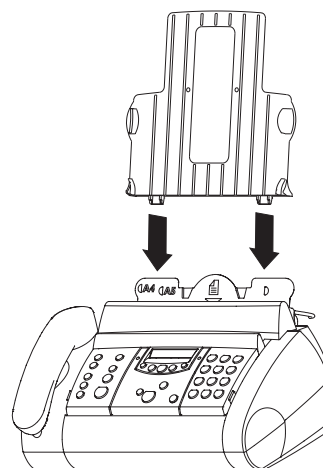


- 3 Stick the paper support insertion in the openings provided on the paper feed flap.

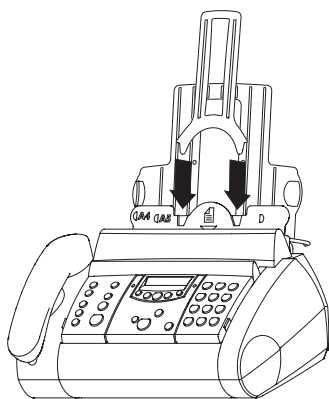

- 4 To prevent several sheets being drawn into the machine at once, first fan out the paper to separate the sheets and then straighten the stack on a flat surface before inserting it into the paper feed.



- 5 Pull the paper feed flap fully forward until it stops. Insert several sheets of A4 paper up to the end-stop in the paper feed mechanism (max. 50 sheets). Close the paper feed flap.

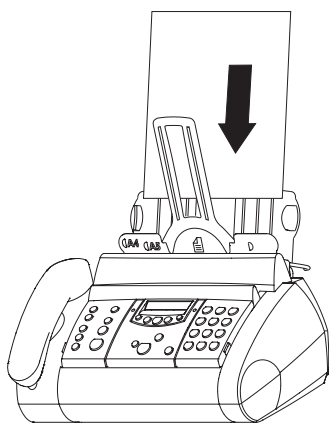


### Removing paper

Fold the paper feed flap forward, pull the paper out and close the flap again.

**!** Never load paper while the fax machine is printing!  
Do not use paper that has already been printed on one side! This could lead to a paper jam.

## Paper jam

Pull the paper feed flap forward. Press the lever next to the paper feed slot to the right and hold it in this position. Carefully pull the paper out from above and close the flap again. Press **START**.

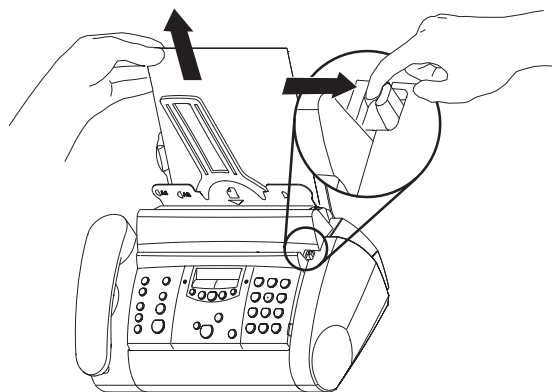

## Easy Install

Using **EASY INSTALL** your fax machine will be configured according to your local conditions.

- 1 Press **①** for at least two seconds. Your fax machine will print one page. Pull out the page firmly and follow the instructions.
- 2 Your fax machine will then guide you on the display through the first settings such as your telephone number and your name.
- 3 Afterwards you need to enter the current time and date. Use the dial pad to enter the correct time and date. Confirm with **OK**.

## Connecting additional devices


In addition to your fax machine, you can also connect other devices, such as **additional telephones**, **call-fee indicators**, **answering machines** or **modems** to a single telephone line [for UK: As long as the Ringer Equivalent Number (REN value) on the line doesn't exceed 4. The REN value of this fax is 1].

### To the same socket (not in all countries)

You can connect additional devices to the same telephone plug.

Make sure that the fax machine is the first device connected to the line.


Connecting additional devices to the same socket ensures you the optimal functionality of your active fax switch (e.g. call transfer). Your fax machine can control the additional devices.

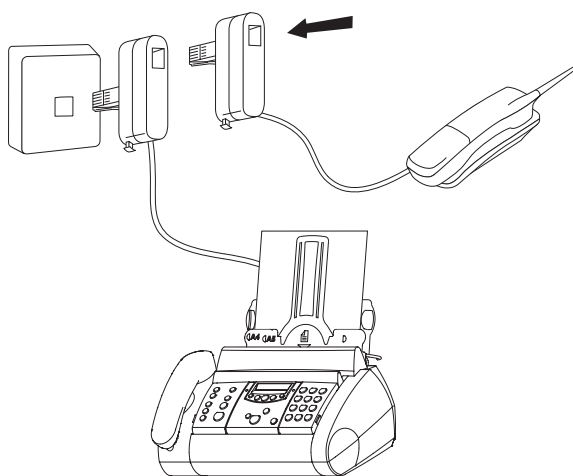

### To separate sockets (not in all countries)

You can connect additional devices to separate sockets on the same line even if they are in different rooms.

Please note: If you connect additional devices to separate sockets (e.g. in separate rooms) your intelligent fax switch cannot control them (which means that your fax machine behaves like any ordinary fax machine). For this reason e.g. call transfer is not possible. Therefore we recommend you to connect your additional devices to the same socket.

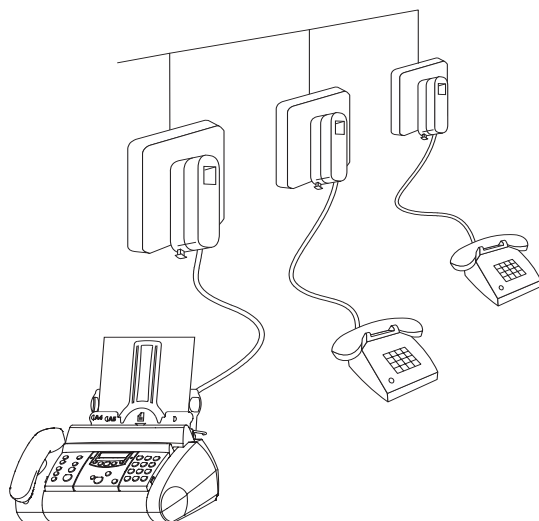

If you intend using special auxiliary devices with your fax machine, please contact your dealer.

If you wish to receive faxes via modem, you must set your fax machine to **MANUAL RECEPTION**.

## Connecting to ISDN

Your fax machine is not an ISDN fax (group 4), but an analogue fax machine (group 3). Therefore it cannot be used directly on an ISDN connection. You will need an (analogue) adapter or an ISDN connection for analogue devices. For further information please refer to your ISDN instructions.

## Connecting to a private branch exchange (PABX)

Private branch exchange systems are very common in large companies. ISDN connections are private branch exchanges and are used very often in private households. To get a connection from a private branch exchange to the public network you have to dial a key to obtain the outside line.

An additional telephone which is connected to a normal telephone line together with your fax machine must not be mixed up with a private branch exchange.

If you wish to use your fax machine on a PABX you have to change some settings in function 15.

## Private branch exchange - Line type

**In the UK** you can select with function 15 only the connection to a private branch exchange.

**In all other countries** it is also possible to select the telephone line type with this function. Press **MENU** ①⑤, then **OK**, select with **◀/▶** and confirm with **OK**. Continue with point **2**.

- 1** Select function 15 by pressing **MENU** and then entering the digits ①⑤. Press **OK**.
- 2** You can switch on the PABX operation using u. Press **OK**.

|       |    |
|-------|----|
| PABX: | NO |
|-------|----|

|       |     |
|-------|-----|
| PABX: | YES |
|-------|-----|

- 3** Now enter the key that has to be pressed to obtain an outside line (this outside line access code must be obtained from the manufacturer). This is either ⑩, **R** (in some systems also described as **FLASH**) or a number key. Press **OK**.
- 4** Press **OK**. Your machine will then check that the outside line can be obtained.
- 5** ... if the check is successful, briefly appears:

|          |
|----------|
| CHECK OK |
|----------|

6 ... if the check is unsuccessful, briefly appears:

CHECK NOT OK

7 You will be asked to repeat the entry. Check the key for

CHECK NOT OK

delete the key for obtaining the outside line by pressing **CLEAR**.

In case your PABX requires **R** to obtain an outside line but it is still not possible to get through to the line, your system might not be according to the regulations. Therefore some technical settings have to be changed on your fax machine. Please refer to your Fax Call Centre.

## Computer connection

In order to be able to use your fax machine as a printer and scanner in conjunction with your computer, you must connect it to the computer and install the software provided with the fax machine. This includes comprehensive on-line documentation.

### Requirements


- For Windows® 95:  
486 processor or higher, at least 16 MB RAM
- For Windows® 98:  
Pentium® 133 MHz, at least 32 MB RAM
- For Windows® ME:  
Pentium® 166 MHz or higher, at least 32 MB RAM
- For Windows® NT or Windows 2000:  
Pentium® II or higher, at least 64 MB RAM
- VGA screen
- parallel port: IEEE 1284 ECP

Please use only printer cables which are complying to the norm IEEE 1284 and must not be longer than 2 m. For installation, you will need about 20 MB free memory on the hard disk.


### Connection

- 1 Make sure that the fax machine and the computer are both switched off or unplugged from the power supply.

2 Remove the socket cover for the printer cable.

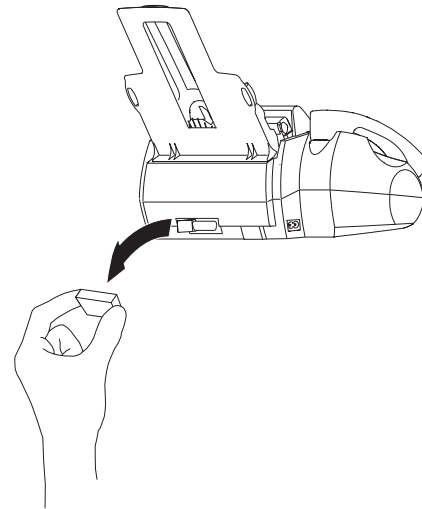

3 Insert the printer cable to the corresponding sockets of the computer and of the fax machine.

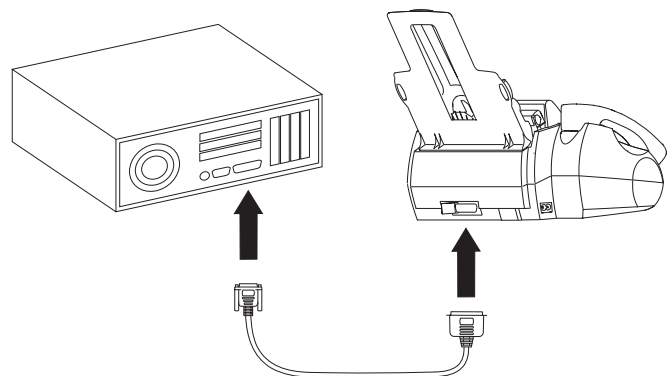

4 Reconnect the fax machine to the mains and switch on the computer.

5 If the Windows Plug&Play function detects a new hardware component, abort it. The installation must be run via the enclosed CD.

### Installing software

- 1 Close down all programs on the computer.
- 2 Insert the installation CD provided with the fax machine.
- 3 The installation procedure begins automatically. Follow the instructions on the screen.
- 4 Once this is complete, re-start the computer.

If the installation process is not invoked automatically or cannot be executed correctly, start the program "setup.exe" on the installation CD.

# 3 Basic settings

! If you press a wrong key by mistake, press the STOP key as often as necessary to return to the original position.

If you want to keep a note of the factory settings on your machine for later, we recommend printing out a function list before you change any of the settings (press MENU three times).

If you want to delete your individual settings, you can do so in function 45 Service code (see chapter **Hints and Tips** / Service code).

“Your name” and “your telephone number” are transmitted at the top of each page (the first 4 mm) together with the date, time and page number.

## HELP function

- 1 Press **i** twice. You will receive a printout explaining how to use the most important functions. It also specifies how to obtain further HELP pages concerning other features of your fax machine.

## Time and date

- 1 Select function 12 by pressing MENU and numbers ① and ②.
- 2 Press OK.
- 3 Enter the correct time using the number keys (e. g. ⑨⑨①⑤ for 9:15). Your fax machine will now ask you for the correct date (e. g. ①⑤①⑤①② for May 15, 2002).
- 4 Press OK.

## Entering your number

Use **#** or **\*** to enter the “+”, that is often used in international fax numbers in front of the country code, and **►** to enter a space. The maximum number of digits you can use for your number is 20.

- 1 Select function 13 by pressing MENU and numbers ① and ③.
- 2 Press OK.
- 3 Enter your telephone or fax number.
- 4 Press OK. Your number is now stored.

## Entering your name

- 1 Select function 14 by pressing MENU and numbers ① and ④.
- 2 Press OK.
- 3 Enter your name by using the dial pad (see next page). After pressing **►** the cursor moves one place to the right.
- 4 Confirm with OK. Your name is now stored.

## Correction

If you have entered a wrong letter or number in function 13 or 14 you can correct the mistake during the entering as well as later. If you want to make your corrections later you have to select the functions for entering numbers or names once again.

- 1 Position the cursor on the right side of the character you want to change with **◀/►**. Press **CLEAR** to delete the character. A long press on **CLEAR** will delete the whole line.
- 2 Now enter the correct characters by using the dial pad. Confirm with OK.

| press | 1x    | 2x | 3x | 4x | 5x | 6x | 7x | 8x | 9x | 10x | 11x | 12x | 13x | 14x | 15x | 16x |
|-------|-------|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|
| ①     | space | .  | -  | 0  | +  | ?  | /  | :  | *  | %   | !   | (   | )   | [   | ]   | ..  |
| ②     | 1     |    |    |    |    |    |    |    |    |     |     |     |     |     |     |     |
| ③     | A     | B  | C  | 2  | a  | b  | c  | Ä  | Å  | Æ   | Ç   | ä   | å   | æ   | ç   |     |
| ④     | D     | E  | F  | 3  | d  | e  | f  |    |    |     |     |     |     |     |     |     |
| ⑤     | G     | H  | I  | 4  | g  | h  | i  |    |    |     |     |     |     |     |     |     |
| ⑥     | J     | K  | L  | 5  | j  | k  | l  |    |    |     |     |     |     |     |     |     |
| ⑦     | M     | N  | O  | 6  | m  | n  | o  | Ñ  | Ö  | ñ   | ö   |     |     |     |     |     |
| ⑧     | P     | Q  | R  | 7  | p  | q  | r  | s  |    |     |     |     |     |     |     |     |
| ⑨     | T     | U  | V  | 8  | t  | u  | v  | Ü  | ü  |     |     |     |     |     |     |     |
| ⑩     | W     | X  | Y  | 9  | w  | x  | y  | z  |    |     |     |     |     |     |     |     |

## Language of display

- 1 For selecting the language of the display and the reports, press **MENU** and numbers ① and ① and press **OK**.
- 2 Select the desired language with ◀/▶ and confirm with **OK**.

## Type of ring signal

You can choose between ten different ring signals.

- 1 Enter function 44. Press **MENU** and numbers ④ and ④ and then **OK**.
- 2 Select the desired ring signal with ① to ⑩.
- 3 Confirm your setting with **OK**.

## Volume of the ring signal

You can adjust the volume of the ring signal if the fax machine is in stand-by mode or if it is just ringing. Please note that different volumes can be set in ☀ and ☾ mode (see **Fax switch**).

- 1 By pressing ◀/▶ the display shows the current setting for about three seconds.
- 2 Change the volume by pressing ◀/▶ until the desired volume is achieved.

## Volume of the loudspeaker

- 1 You can adjust the volume of the loudspeaker at any time by pressing **DIAL** (without built-in answering machine) or ④ (with built-in answering machine).
- 2 By pressing ◀/▶ the display shows the current setting.
- 3 If you wish to adjust the displayed value, press ◀/▶ until the desired volume is achieved.
- 4 Finish your entry by pressing **STOP**.



# 4 Fax switch

The intelligent fax switch enables you to phone and fax from the same telephone connection and use additional devices. The fax switch separates fax and voice messages. For example, it can receive fax messages silently, i.e. without ringing to avoid causing a disturbance.

The operating modes ☀ and ☾ for day and night operation allow you to decide on different modes during the day and at night, how often the machine should ring prior to receipt of faxes or before the answering machine is turned on.

Example:

During daytime it is assumed that calls should ring. After a set time the fax reception is turned on or messages can be left on the (internal or external) answering machine. At night it is assumed that disturbances are minimised. Faxes are then received silently and calls ring more quietly.

You may change-over the operating mode between ☀ and ☾ of your fax machine automatically using the timer function ⌚. The integral clock ensures that your machine is changed over at 10 pm to ☾ and at 6 am to ☀. Of course you may adjust these times to suit your own requirements. The display allows you to check the current operating status. You change-over between ☀ and ☾ by briefly pressing the key ☀ until the display shows the required symbol.

## Setting the mode ☀☾

### with built-in answering device

| Display      | Possible settings                  |
|--------------|------------------------------------|
| TAM RINGS:   | 0, 1, 2, 3, 4, 5, 6, 7, 5/2        |
| FAX RINGS:   | 0, 1, 2, 3, 4, 5, MANUAL RECEPTION |
| RINGER VOL.: | LOW, MEDIUM, HIGH                  |
| LISTEN-IN:   | ON, OFF                            |

- 1 Select function 31 (Day) by pressing MENU and numbers ③ and ①. Confirm with OK.
- 2 Select number of rings with ◀/▶ before your answering device will be activated.

TAM RINGS: 5/2

- 3 Confirm your entry with OK.

- 4 Now enter the number of ringing signals, after which the automatic fax-switch should accept the call and separate faxes from voice messages. Although the caller will continue to hear slightly different ringing tones after this time, charges will already accrue.

FAX RINGS: 5

- 5 Confirm your entry with OK.
- 6 Using ◀/▶, determine the ringer volume when receiving a call. Press OK.

RINGER VOL.: HIGH

- 7 Select with ◀/▶ if the caller should be heard while leaving a message.

LISTEN-IN: ON

- 8 Confirm with OK.

- 9 To activate mode ☾ select MENU ③② (Night) and repeat steps 2 to 8.

### without built-in answering machine

| Display      | Possible settings                  |
|--------------|------------------------------------|
| TOTAL RINGS: | 0, 1, 2, 3, 4, 5, 6, 7             |
| FAX RINGS:   | 0, 1, 2, 3, 4, 5, MANUAL RECEPTION |
| RINGER VOL.: | LOW, MEDIUM, HIGH                  |

- 1 Select function 31 (Day) by pressing MENU and numbers ③ and ①. Confirm with OK.
- 2 Using ◀/▶, set the total number of rings before the fax reception commences.

TOTAL RINGS: 5

- 3 Confirm your entry with OK.

- 4 Now enter the number of ringing signals after which the fax-switch should accept the call and separate faxes from voice messages. Although the caller will continue to hear slightly different ringing tones after this time, charges will already accrue.

FAX RINGS: 5

- 5 Confirm your entry with OK.
- 6 Using ◀/▶, determine the ringer volume when receiving a call. Press OK.

RINGER VOL.: HIGH

- 7 Confirm with OK.

- 8 To activate mode ☾ select MENU 32 (Night) and repeat steps 2 to 7.

If you cannot receive any faxes, you may have set both ringing signal numbers too high (see points 2 and 4). Set both ringing signal numbers to values lower than five.

If you are using other devices apart from the fax machine (telephones, answering machines), which are not connected by serial links (see Glossary), the ringing pattern may change as follows: Other devices ring as often as set under **FAX RINGS:** . Your fax will ring as often as set under **TAM RINGS:** or **TOTAL RINGS:** .

## Special settings

### Silent fax reception

**FAX RINGS:** 0

To receive faxes without any ring signals, set the amount of ring signals in **FAX RINGS:** to 0.

### Completely silent operation

You should use this option only **with devices with integral answering machines**. If, for example, you do not wish to be disturbed by calls or faxes arriving at night, you may set the number of ringing signals to 0. Faxes are then received silently and calls are immediately answered by the answering machine, provided you have switched the answering machine on.

**For devices without integral answering machine** the fax-switch is turned off, i.e. your device immediately switches over to fax reception and will not ring, when calls are received (the caller hears a whistling tone).

! For this reason calls cannot be recorded by any external answering machine which may be connected.

### Manual fax reception

**MANUAL RECEPTION**

If you select **MANUAL RECEPTION** then faxes are only automatically printed out by your fax machine, if you activate the fax reception by pressing **START**. This may be sensible for example, if you wish to receive your faxes by modem at your computer.

### Economy operating mode-answering machine\*)

**TAM RINGS:** 5/2

If you select option 5/2 at **TAM RINGS:**, then your answering machine will start after two ringing signals instead of after five, when you receive messages. Via the remote access function you have the opportunity to check whether your answering machine holds any messages without incurring telephone cost (if your answering machine turns itself on after only two ringing signals you will know, that new messages have been left). After listening to your new messages your answering machine will, at the next call, switch itself on again after five ringing signals.

\*) only with built-in answering machine

## Mode ☺

The default operating mode set in the factory is ☼. You may also select operating mode ☺. In mode ☺ your machine switches automatically between ☼ and ☾. The factory setting provides that your machine switches at 10 pm to ☾ and at 6 am back to ☼.

### ☺ activating/deactivating

- 1 If you want to switch on function ☺, press the key ☼ for two seconds, until you hear a confirmation tone and ☺ appears on the display.
- 2 If you want to switch off function ☺, press the key ☼ for two seconds, until you hear a confirmation tone and ☺ disappears. On the display appears ☼ or ☾.

### ☺ configuring/checking

- 1 Select function 33 by pressing **MENU** and numbers ③ and ③. Press **OK**.
- 2 Enter the time at which you want your fax machine to switch automatically to ☼ and confirm with **OK**.
- 3 Enter the time at which you want your fax machine to switch automatically to ☾. To confirm your settings press **OK**.

## EASYLINK

### Setting additional devices

The three codes below will help you, when you receive a call on an additional telephone and wish to transfer a call or fax to your fax machine.

- 1 Code to start your fax machine if you lift the handset of another telephone and you recognise that it is a fax (you hear a tone or silence): \*⑤
- 2 **Serial connection** (see Glossary): Code for transferring a call from an additional telephone connected serial to your fax machine: \*①

Please note that when using this code you have to replace the handset of your additional telephone after you have entered the code. See chapter **Telephone** / Call transfer.

- 3 **Parallel connection** (see Glossary): Code for turning off the answering message, if the answering machine is switched on: \*②

**For fax machines without built-in answering machine** this code is used to switch off the ringing of the fax machine from an additional telephone.

To be able to use this function you must set your additional or cordless telephone to tone dialling. If your telephone service is not compatible with this dialling method and requires pulse dialling, you must temporarily set your additional device to transmit tone dial signals. Please refer to the operating instructions of your additional device to find out how to make this temporary adjustment.

**! Only change the specified EASYLINK codes if absolutely necessary!**

If you need to change the pre-set codes, select MENU **③④** and press **OK**. Enter a two digit code. The first digit should be the sign **⊛** or **⊜**. Confirm with **OK**. Execute this procedure for each of the three codes.

Please note that the three EASYLINK codes must be different. Otherwise on the display appears:

CODE NOT OK

## External answering machine

Connect the answering machine as described in chapter **Installation / Connecting additional devices**.

To provide for the optimum performance of an external answering machine, set this device to ring once or twice. To avoid the automatic acceptance of calls by the fax-switch, you must set **FAX RINGS:** and **TOTAL RINGS:** to a value at least two ringing signals higher than the setting of the external answering machine.

If you switch off the external answering machine, calls are accepted by the fax-switch (see sub-heading Setting the operating mode **☀☾** /without built-in answering machine)

### Setting example:

|                         |   |
|-------------------------|---|
| ANSWERING MACHINE RINGS | 2 |
| TOTAL RINGS:            | 4 |
| FAX RINGS:              | 4 |

### Tips:

- 1 The answering message of your answering machine should be shorter than 10 seconds.
- 2 Please avoid music in your outgoing message.
- 3 If your fax machine is unable to recognise older fax machine models, which do not transmit those signals that are commonly used in today's technology, you should advise your callers in your answering message to press **⊛** and **⑤** followed by **START** to commence the fax reception.
- 4 If the automatic fax reception is impossible, press **START** to manually begin receiving the fax.
- 5 If your answering machine provides an "economy function" (e.g. a function which changes the number of ringing signals as soon as a message was recorded), you should preferably switch this function off.
- 6 It is possible that the answering machine not only counts the messages received, but also the number of fax calls.
- 7 Please ensure that the code for starting the fax reception from other telephones (factory setting **⊛** and **⑤**) is not the same as for remote access to recorded messages. Where necessary the code for function 34 may be changed (see sub-heading EASYLINK).
- 8 If your answering machine accepts the call but your fax machine does not stop ringing, try and install your answering machine by serial connection, for example by connecting it to the same telephone socket or to the EXT.TEL. socket of your fax machine (see chapter **Installation / Connection of additional devices**).
- 9 If your answering machine cannot accept calls, your fax machine will automatically start to receive faxes after the no. of ringing signals set in **TOTAL RINGS:** has been received.
- 10 If your external answering machine records fax signals, but your fax machine cannot receive any faxes, check the connection of your external answering machine. Connect the external answering machine to the same telephone socket or to the EXT.TEL. socket of your fax machine (see chapter **Installation / Connection of additional devices**).

If you enter a wrong digit, delete it by using **CLEAR**. Then lift the handset.

The **R** key allows you to use various services offered by the telephone service provider (call waiting, toggling calls, etc.). Contact your telephone service provider for more information.

If you have not connected your fax machine to the mains, it will not function at all - even for making telephone calls.

## Making a call

- 1 Dial the desired number.
- 2 Lift the handset. If you want to dial with the handset replaced press **DIAL/☎**. As soon as the other party answers, lift the handset and speak.

## Redial

With **→→** you can redial the last five numbers you have dialled previously.

- 1 Press **→→**.
- 2 Press **◀/▶** until the desired number appears on the display. If you want to edit the number press **OK** and make the desired changes.
- 3 Lift the handset or press **DIAL/☎**.

## Delete stored numbers

With **CLEAR** you can delete the numbers you do not need anymore from the redial memory.

- 1 Press **→→** and then **CLEAR**.
- 2 Choose with **◀/▶** whether to delete only the last number displayed or all five numbers.
- 3 Press **OK** to execute the cancel command.

## Short dial 0-9

There are short dialling keys available, which you can use to store numbers you dial frequently.

### Storing numbers

- 1 Press  **0-9** for two seconds.
- 2 Choose a number between **①** and **⑨**.
- 3 Use the dial pad to enter a name. After pressing **▶** the cursor moves one place to the right. Press **OK**.
- 4 Enter the telephone number and confirm with **OK**.

### Using short dial

- 1 Press  **0-9** and choose a number between **①** and **⑨**. The stored name or telephone number appears on the display. In order to edit the number press **OK** and make the desired changes.
- 2 Lift the handset. In case you want to send a fax message, press **START**.

### Correcting entries

- 1 Press  **0-9** and select an entry by using the number keys between **①** and **⑨**. The stored name or number appears on the display.
- 2 Press  **0-9** for two seconds and select wrong character with **◀/▶**.
- 3 Press **CLEAR**. The sign left to the cursor will be deleted.
- 4 Enter desired character and confirm with **OK**.

### Deleting entries

- 1 Press  **0-9** and then a key between **①** and **⑨**. The stored name or telephone number appears on the display.
- 2 Press **CLEAR**. Select with **◀/▶** whether to actually delete entry.
- 3 Press **OK** to confirm the deletion of the entry.

## Telephone book A-Z

The telephone book function on your fax machine has a capacity for about 200 numbers and names. The exact figure depends on the length of each entry. You can also store numbers during a telephone conversation.

### Storing numbers

- 1 Press  **A-Z** for two seconds.
- 2 Use the dial pad to enter a name. After pressing **▶** the cursor moves one place to the right. Then press **OK**.
- 3 Enter a telephone number and confirm with **OK**.

### Using the telephone book

- 1 Press  **A-Z**.
- 2 Select with **◀/▶** or the letters of the dial pad. The stored name or telephone number appears on the display. You can change the number by pressing **OK** and complete the change.
- 3 Pick up the handset. In case you want to send a fax message, press **START**.

## Correcting entries

- 1 Press **□ A-Z** and select the entry you want to edit with **◀/▶** (see above).
- 2 Press **□ A-Z** for two seconds. Select wrong character with **◀/▶**.
- 3 Press **CLEAR** to delete wrong character left to the curser.
- 4 Enter correct character and confirm with **OK**.

## Deleting entries

- 1 Press **□ A-Z** and select entry you want to delete with **◀/▶**.
- 2 Press **CLEAR**. Select with **◀/▶** whether to actually delete entry.
- 3 To delete entry confirm with **OK**.

## List of telephone numbers

- 1 Choose function 42 to print a list of your stored Short dial and Telephone book numbers. Press **MENU ④②**.
- 2 Press **OK**. Your fax machine will then print out the list.

## Call transfer

You can transfer an existing phone call from your fax machine to an additional telephone and vice versa. This description only refers to telephones connected serial (see Glossary).

### From fax machine to an additional telephone

- 1 Press **∕/☎** during the phone call and replace the handset.
- 2 Your additional telephone will ring for about 30 seconds. If the handset is not lifted in time, the fax machine takes over the call again and rings for about 20 seconds. If you do not lift the handset in time the call will be disconnected.

### From an additional telephone to the fax machine

- 1 Press **\* ①** and **①** during the phone call. If the connection is established successfully, you will hear a tone. Replace the handset of the additional telephone within three seconds.
- 2 Your fax machine will ring for about 30 seconds. If the handset is not lifted in time, the additional device takes over the call again and rings for about 20 seconds. If you do not lift the handset in time the call will be disconnected.

## Hands-free operation

### (only with built-in answering device)

You can make a call without using the handset or let persons in the same room participate at the conversation. Therefore press **④** after having dialled or during the call. Replace the handset. The microphone and the loudspeaker are being activated.

## Mute

You can mute the microphone of the handset so that the other party cannot hear you any more.

- 1 Press **∕/🔇**. You will still hear the person on the other end of the line at reduced volume.
- 2 If you want to continue your conversation, press **∕/🔇** again.

## Calling line identification

### (not available in all countries)

Your fax machine is capable of showing the caller's telephone number before you lift the handset. To have this feature at your disposal you must subscribe to it via your telephone service provider. The use of this feature is subject to network selection.

- 1 The telephone numbers of the last ten received calls are stored.
- 2 To call up the caller's list keep **→→** pressed for two seconds.
- 3 Using **◀/▶** you can now step through the entries. The new entries are marked with an **"\*"**.
- 4 To call back the displayed number just lift the handset. Your fax machine starts dialling.
- 5 To delete an entry press **CLEAR**. Choose with **◀/▶** and confirm deletion by pressing **OK**.

If you set **FAX RINGS:** with **MENU ③①** or **③②** to **②**, then the telephone number cannot be displayed on your external telephones.

The following points are the most common causes of errors when sending faxes! Don't send



... pages from newspapers (printer's ink).



... stapled pages or pages held together with paperclips. Remove all staples and clips before sending.



... creased or torn pages.



... wet pages or pages with corrections made with correction fluid; dirty pages or pages with a glossy or laminated surface.



... pages joined with sticky tape or glue, with adhesive stickers such as "post-it®" notes, or pages which are too thin or too thick.



... pages written in faint pencil, crayon, chalk or artist's charcoal.

Documents smaller than A5 risk getting stuck in the machine.


Write clearly and legibly. Only use pens with dark ink (black/dark-blue, not yellow/orange/light green).

## Feeding documents in

- 1 To avoid more than one page being fed at the same time, first fan out the stack and then straighten it on a smooth surface.
- 2 Insert your documents (max. 10 sheets) loosely **with the printed side to the front** into the document feed slot. In case a document jam occurs, remove the scanner from the device and remove the document.

## Sending faxes

- 1 Dial the number you require.
- 2 Insert your documents face to the front into the document feed slot (max. ten pages).

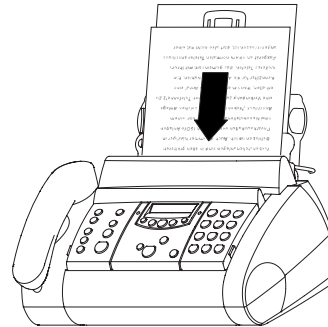

- 3 If you want to select a higher resolution, press **FINE/PHOTO**.
- 4 Press **START**. Transmission now begins. In case the connection is not successful your fax machine will redial later.
- 5 If you want to interrupt transmission, press **STOP**.

## Broadcast

This feature is very useful, in case you want to send the same document to more than one party (Circular send).

- 1 Insert the document face to the front into the document feed slot. If you want to select a higher resolution, press **FINE/PHOTO**.
- 2 Select **MENU ②⑤**. Press **OK**. The inserted document will be stored into the memory.
- 3 Enter the first telephone number and press **OK**. This will be your first entry in the recipient list. Repeat the procedure until you have entered data for max. five recipients.
- 4 To send the document press **START**. The document will be sent successively to every party entered. If transmission to one of the recipients is not possible your fax machine will continue transmission according to the list and retry transmission to the party missed. After transmission a transmission report will be printed out automatically.



## Image quality

If you want to improve the image quality you can choose between the options **FINE**  (for small print or fine drawings) and **PHOTO**  (for photographs and pictures). Press **FINE/PHOTO** as often as needed until the pointer for the desired resolution lights up. Document transmission will take longer in the FINE/PHOTO operating mode. After transmitting or, if there is no document in the feed slot, after 40 seconds the fax machine will automatically return to standard resolution.

## Transmission report - error report

Your fax machine can print a transmission report every time you have sent a document. This way you are given confirmation that your document has been received. If an error occurs during transmission you will be informed on the error report. The printing of a transmission report can be switched on and off while the error report is always printed.

- 1 Call up function 43. Press **MENU**   and **OK**.
- 2 Select with   and confirm with **OK**.

## Overseas function - Transmission

Your fax machine automatically adjusts its transmission speed to the quality of the telephone line. Especially in case of overseas transmissions this process can take more time. If the poor line quality is already known it is useful to set the machine at a slower speed from the very beginning using   in function 21. This will save time and charges the automatic adjustment would require.

- 1 Press **MENU**,   and **OK**.
- 2 Select a slower speed with   and confirm with **OK**.

## Size compression

To make sure that received faxes that are slightly longer than A4 size are printed on one page, these pages are slightly reduced vertically. If you do not wish to use this facility, you can switch off reduction using function 46.

- 1 Press **MENU**,   and **OK**.
- 2 Select with   and confirm with **OK**.

## Fax journal

The fax journal is a list of the last ten received and transmitted faxes.

- 1 Call up function 41 by pressing **MENU**,   and **OK**.
- 2 Select with   if, and when the fax journal will be printed out (immediately or after ten transmissions).
- 3 Confirm your choice with **OK**.

## Polled reception

By means of this function documents which have been prepared for collection from another fax machine can be retrieved.

### Quick polling

- 1 Dial the desired number with the handset replaced and press **START** for a longer time.
- 2 In case you want to enter a sub address or a code as well (check polling with code) enter the telephone number first and close with **R**. Attach desired sub address or code and press **START** for a longer time. (e. g.      **R**   **R** Code or      **RR** Code).

### Polling with code

If your correspondent has entered a code to protect the document to be retrieved please follow this procedure:

- 1 Select **MENU**  . Press **OK**.
- 2 Enter the code and confirm with **OK**.
- 3 Enter the telephone number and press **START**. In case it does not work try to poll manually. Lift the handset, dial the required number and then press **START**.

Polling codes work in accordance with the ITU international standard. However, there are manufacturers who use other processes and whose machines are therefore not compatible.

If you want to send faxes to fax databases or if you want to poll from these, some databases have a sub-address which you can add to the telephone number. This will save you money in telephone charges. First enter the telephone number of the database and then press **R**. Then enter the required sub-address. If you are not sure whether your fax polling service supports sub-addresses, please contact your polling service operator.



## Polling send

You can allow a document to be polled from your fax machine.

- 1 Insert the document in the document feed slot.
- 2 If you wish to protect the document from unauthorised access, enter a code with function 23. Press **MENU**, ② ③ and confirm with **OK**. The document can now be polled by a person in possession of this code. You can still make telephone calls while this function is activated.
- 3 The operation is interrupted as soon as you remove the document.

## Send later

If you wish to make use of cheaper telephone rates, or if your fax correspondent is only available at particular times, you can program automatic transmission of a fax at a later time (within 24 hours).

- 1 Select function 24 by pressing **MENU** ② ④ and **OK**. Enter the time when you wish the document to be sent.
- 2 Press **OK** and insert the document.
- 3 Dial the desired telephone number and then press **START** or **OK**.
- 4 The fax machine is now ready to send the inserted document. You can still make telephone calls while this function is activated.
- 5 If you remove the inserted document the stand-by mode is cancelled.

## Paperless fax reception

If there is no paper in the paper feed mechanism or if the ink cartridge is finished, any incoming fax will be received into memory (storage capacity for devices without answering machines is approximately 25 pages, for devices with answering machines approximately 50 pages according to ITU-TS Test document). The symbol  appears on the display to indicate that the memory contains documents. As soon as paper and/or ink cartridge are loaded, the fax machine automatically prints out all documents in memory.

When a fax message has been fully printed, it is deleted automatically from memory. If the printing process is interrupted, all fax messages not printed completely remain in memory. If the memory is full, no more pages can be stored. The red display lamp  flashes and on the display appears:


|             |
|-------------|
| MEMORY FULL |
|-------------|

# 7 Copier-Scanner-Printer

## Copying

You can use your fax machine to make copies of an original. You may also choose **PHOTO**  and **FINE**  resolution (see chapter Fax / Image quality).

- 1 Place your documents face to the front in the document feeder. You can load up to ten pages at once.

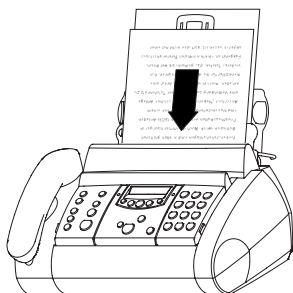

- 2 Select the desired resolution with **FINE/PHOTO**. To make only one copy of the original, briefly press **START**. The copying process starts immediately.

In order to make more than one copy press **START/COPY** (for at least two seconds). The display will show the actual number of copies. If you want to change this figure enter the desired number with the number keys (max. 50). Press **START** or **OK**.

- 3 Choose whether to reduce or enlarge the document in size when copying. Your machine provides the following options:

ZOOM ENLARGE: 150


ZOOM REDUCE: 75

ZOOM REDUCE: 50

ZOOM NORMAL: 1:1

Select the desired option with / and confirm with **OK**. The machine stores the first page of the document into memory and starts copying. If the desired number of copies has been achieved, the next page will be stored etc. Automatic sorting is therefore not an option!

- 4 The document that has been pulled through will come out on the top side of the fax machine.

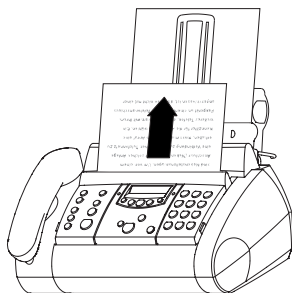

- 5 To stop copying press **STOP**. The document and the copy will be ejected.

You can only enlarge or reduce documents with the scanner inserted.

In case a paper jam occurs or the ink cartridge or the memory capacity is used up the copying process automatically stops.


If documents have jammed, first remove the scanner from the machine and then the document. Refit the scanner according to instructions.

## Copying with the scanner detached

The detachable scanner allows you to copy or fax documents which cannot be fed into the fax machine due to their size or thickness (e.g. books, magazines). The copied area can be printed out or sent as a fax message.


- ! Please do not touch the glass on the bottom of the scanner with your fingers to avoid fingerprints which might affect the copy quality (see chapter Hints and Tips / Care and maintenance).

- 1 Detach the scanner from the fax machine by pulling it forward and then lifting it upwards on both sides.

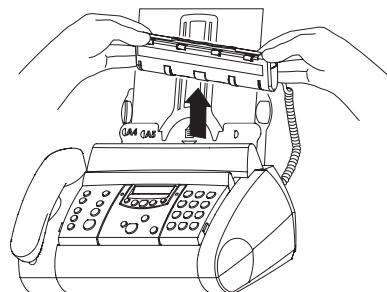


- 2 If you want to improve the copy quality, press **FINE/PHOTO**. However, this will scan the document at a slower speed (see chapter Fax / Image quality).
- 3 Press **START**. When the machine is ready for copying you will hear a confirmation tone.

- 4 Press the scanner slightly against the document. Slowly move the scanner over the document from top to bottom. The available memory capacity will be indicated on the display during copy procedure. The correct copy speed will be indicated by short confirmation tones. If they appear too fast, you will hear a warning signal indicating that the scanning process of the document was not successful. Start the copying again as described in 3 and 4.

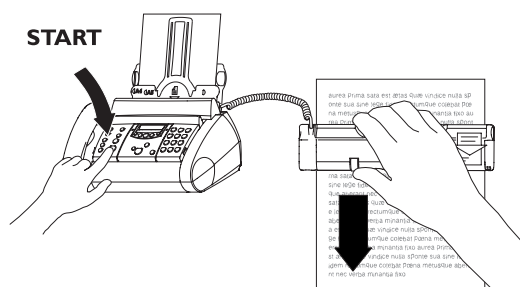

- 5 After the scanning process is completed the document will be printed if you press **START** or automatically after approximately four seconds. Documents larger than A4 will be split up into more than one page automatically. During the printing process printed information will be simultaneously erased from the memory. Press **STOP** or **CLEAR** to terminate printout. The scanned document will be erased from the memory.
- 6 Place the scanning device **face front** into the fax machine after use. Press both sides of the scanner down until you hear a definite click.

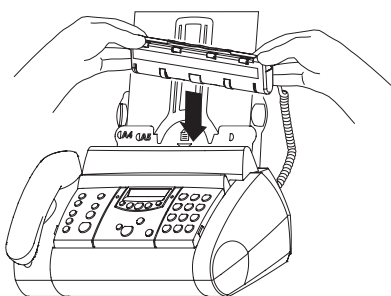

In case the scanner was not put in correctly the indicator lamp  flashes and on the display appears

**CHECK SCANNER**

## Scanning into the PC

- 1 Place the document in the document feed.
- 2 There are two ways you can call up the scan function:
  - a Click on the LinkFax-Pro symbol on the right lower edge of your screen. Select in the menu the command “scan”.



- b Open the graphics program into which you wish to scan. Select as source the Linkfax-Pro-Scanner driver.
- 3 The Linkfax-Pro-Scan window will open.
- 4 You can create a preview by using “page view”. On this preview, a section of the document can be selected which is to be scanned. With preview, you can also try out the effects of various adjustments (e.g. filter, etc.).
- 5 Select the desired scan settings.
- 6 If the document consists of several pages, click on “automatic document feed”.
- 7 Press the “Scan” command.
- 8 Once the scanning procedure is completed, the image of the document can be stored.

If you click on the “Help” command, on-line help will open.

## Colour printing

### Changing to a new cartridge colour

- 1 You can also print documents which you have stored in your computer in colour. To do this, you need to exchange the black cartridge for a colour cartridge.
- 2 Follow points 1-5 of the instructions under “Installation/ Changing the cartridge”.
- 3 The fax machine automatically distinguishes between a colour and a black cartridge. When you insert a colour cartridge for the first time, the display shows

CARTR. NEW: YES

Confirm with OK.

- 4 If you have already used the cartridge, your fax machine automatically recognises the fill level of the cartridge again.

If a colour cartridge has been inserted, faxes will not be printed out but will be read into memory.

The display shows :

BLACK CARTRIDGE

Change the cartridge or press START if you wish to print out the fax regardless.

If the mouse cursor remains on an option in the printer dialogue window for longer than 3 seconds, a short description will appear.

If you click with the right mouse button on a modification box in the printer dialogue window, the on-line help for this topic will appear.

You may also click on the “Help” command. The overview of on-line help will open.

## Contrast

The factory default for this feature has been set to medium. With function 47 you can adjust the contrast quality (brightness) for documents you want to copy or send as a fax message, e.g. dark photos or forms with coloured background.

- 1 Press MENU, ④⑦ and OK.
- 2 With ◀/▶ you can choose between three different options:

CONTRAST: LOW

CONTRAST: MEDIUM

CONTRAST: HIGH

- 3 Confirm your choice with OK.

### Printing out from the PC

If the software installation has been performed successfully, your fax machine is now set up as a standard printer. You can now print out on the fax machine from any program you like.

- 1 You can modify the printer settings for each respective application. If you give a print command or select printer installation, a dialogue box opens. Select the command which will take you to printer setting and make the desired modifications.
- 2 In “Control Panel”, you can modify the printer settings for all applications. Highlight the LinkFaxPro printer and under “File / Properties” make the desired modifications.
- 3 Under “File / set as default” you can determine whether you wish to use the fax machine as a standard printer or not.

# 8 Answering machine

## (only with built-in answering device)

Your fax machine is equipped with a digital telephone answering machine. All recorded messages are stored in a solid-state electronic memory which has a recording capacity of up to 25 minutes. There is neither a magnetic tape nor a cassette.

Your answering machine is factory-programmed with a recorded outgoing message. If you want to record your own outgoing message, proceed as described under "Recording a message". Write down your messages before you record them.

Make sure that your fax machine stands on a hard, flat surface, because otherwise the microphone may be covered.

## Switching on and off

Activate or deactivate your answering machine with ON/OFF. Activate mode is indicated with the symbol  on the display.

## Recording a message

- 1 Hold down **RECORD** for two seconds. Press **RECORD** again, until you hear a confirmation tone. Lift the handset and start to record your message.
- 2 A black bar indicates you how much memory is available for the outgoing message (max. 20 seconds).
- 3 Stop recording by pressing **RECORD** or **STOP**.
- 4 The new answering message is automatically replayed. By pressing   you can change the volume of the message.
- 5 To hear the message again, press **RECORD** for a while (two seconds) and then **PLAY** .

## Duration of recording

- 1 Select **MENU**   and press **OK**.
- 2 Press   to choose between 30, 60, 120 seconds or the **AUTO** mode (unlimited recording time). Please note that **AUTO** mode is not available in all countries.
- 3 Confirm with **OK**.

## Listening to messages

- 1 If the green lamp for the answering device  flashes, messages have been recorded for you. Press **PLAY**  to listen to the first message. The date and time the message was received will be shown on the display.
- 2 The next message will be replayed if you press **PLAY**  while listening to any message.
- 3 If you want to switch to the first message while listening to the other messages, press .
- 4 After listening to your messages the green lamp of the answering device  will stay on until all messages have been erased.

## Play back volume

- 1 Press   while playing back messages. The current volume setting will be displayed.
- 2 Press   to obtain the desired volume.

## Deleting messages

### Single messages

- 1 If you want to delete the message which is currently being played, press **CLEAR**.
- 2 You will be asked on the display if you really want to delete this message. Press **CLEAR** again.

### All messages

- 1 Press **CLEAR** after having listened to all messages.
- 2 If you actually want to delete all messages, press **CLEAR** again. To interrupt the deleting process press **STOP**.

## Forwarding messages

Your fax machine can automatically forward all incoming messages to another telephone number. Enter the telephone number to which you wish recorded calls to be forwarded. You can select the number of messages to be forwarded each time. Your fax machine will wait until the selected number of messages has been received and then calls the desired number automatically. A text announcing the call forwarding is transmitted when the connection is made. Then the party to which the calls are being forwarded needs to enter the **access code** (see function 52). If the correct access code is not entered within 40 seconds, your fax machine will disconnect the call.

- 1 In case your answering device is deactivated turn it on with ON/OFF. The symbol  appears on the display.
- 2 Select MENU **5****5** and press OK.
- 3 Choose with **◀/▶**

FORWARD CALL: ON

and confirm with OK.

- 4 Enter the telephone number your messages should be forwarded to and press OK.
- 5 Choose with **◀/▶** the number of messages you want to be forwarded each time.
- 6 To record a new forwarding message, press OK.\*
- 7 Press **RECORD**. Wait for the confirmation tone and start speaking. An example of an announcement might be: *"Hello, there are messages for Mrs. Blackwell; please enter the access code."* Position yourself about 20 cm from the fax machine. A black bar will indicate how much memory is available.
- 8 Press **STOP** when you have finished. The forwarding message will be played back.
- 9 The fax machine is now switched to stand-by mode.

\* If a message has already been recorded

- a Press OK.
- b Select with **◀/▶**. If you wish to record a new forwarding message, select **YES**. If you want to use the existing message, select **NO**. Press OK to confirm.

REC. MESSAGE: YES

REC. MESSAGE: NO

- c Follow the process described above from paragraph 7.

## Recording a conversation

You can record a telephone conversation with your fax machine.

- 1 Press **RECORD** during a telephone conversation.
- 2 To stop recording, replace handset or press **STOP**.
- 3 The recorded conversation can be played back and deleted like any recorded message.

You can not record a telephone conversation while hands-free operation is activated.

## VIP code

### Ringling despite answering device

Persons you had given this code, can make the telephone ring after the answering machine has taken the call. This is useful if both ring counts in function 31 and 32 have been set to 0.

- 1 To enter the code select MENU **5****3** and press OK. Enter a four digit code. Confirm with OK.
- 2 This code must not be identical with the access code (function 52).

## Memo

### External memo

With this function, you can record a message which the caller can hear without being able to leave a message in return. For this the answering machine must be switched on.

- 1 Select MENU **5****4** and press OK. Choose the external memo mode by pressing **◀/▶**. Confirm with OK. (If you already have recorded a memo you want to use again, just press OK once more.)
- 2 Press **RECORD** and wait for the confirmation tone. Start to speak. Press **RECORD** or **STOP** when you are finished. The message will be played back.

### Internal memo

You can record a personal message with this function. Messages can be heard on the fax machine itself or by remote control from a telephone. Briefly press **RECORD** twice and wait for the confirmation tone. Record the desired message. A black bar on the display indicates the remaining recording time. To end recording press **RECORD** or **STOP**. Internal memos can be played back and deleted like any other message.

## Remote control

You can also control the answering machine functions on your fax from any telephone using tone dialling. Before you can use remote control you have to enter an access code in function 52 (this code will also be used for function 55 Forwarding).

### Preparing your fax machine for remote access

- 1 Select MENU ⑤② and press OK.
- 2 Enter a four digit code.
- 3 Press OK. The code is now stored.

### Remote access of the answering device

- 1 If you want to listen to the messages recorded from another telephone, call your fax machine and wait for the answering machine to play the message.
- 2 Enter the four-digit code. The outgoing message will be interrupted and you will hear a confirmation tone. The new messages will be played back. If no new messages have been recorded, you will hear a second confirmation tone.
- 3 Then you can enter commands as usual or terminate the remote control by replacing the handset.


### Overview of commands

- ① The message you are just listening to will be repeated.
- ② Your messages will be played back.
- ③ Move to the next message.
- ④ Record a new outgoing message. If you press ④ again after two confirmation tones, you will hear a long confirmation tone. Record the new outgoing message and finish with ④.
- ⑤ The current outgoing message will be replayed.
- ⑥ The current message will be deleted. If you press ⑥ after having listened to all messages, all messages will be deleted. In both cases you will hear a confirmation tone after the first time you press the key. Press ⑥ again within five seconds to execute the deleting command.
- ⑦ Switch answering machine off.
- ⑧ The current command will be interrupted.
- ⑨ Switch answering machine on.

### Functions

- |                            |                                                                                               |
|----------------------------|-----------------------------------------------------------------------------------------------|
| ① Repeat current message   | ⑥ Delete message<br>Current message:<br>Press ⑥, deleted<br>All messages:<br>Press ⑥, deleted |
| ② Play                     |                                                                                               |
| ③ Skip forward             |                                                                                               |
| ④ Record outgoing messages |                                                                                               |
| ⑤ Play outgoing message    | ⑦ Answering machine off<br>Press ⑦, (answering machine off)                                   |
| ⑧ STOP                     | ⑨ Answering machine on<br>Press ⑨, (answering machine on)                                     |

### Remote Access

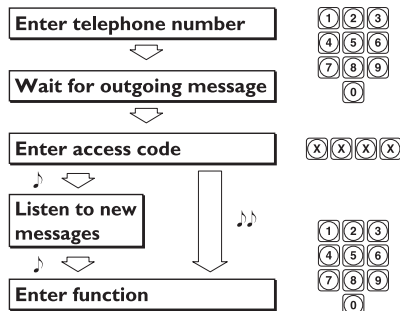



# 9 Hints & Tips

The following table contains an overview of the most frequent operating errors or problems and their possible causes and remedies. Before calling our service desk, please consult this table.

If you can not rectify a fault using the instructions provided, please do as follows:

- 1 Disconnect the mains.
- 2 Wait at least ten seconds and reconnect.
- 3 If the fault reoccurs, please contact your customer information center.

| Error                                                                        | Possible cause                                                                                                                  | Remedy                                                                                                                                                                                                                                                                                                                                                |
|------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| You or your fax correspondent receive blank pages.                           | <p>Your fax correspondent sends the wrong (blank) side of a document.</p> <p>The printer or scanner is faulty.</p>              | <p>Your fax correspondent must feed the document properly.</p> <p>Test the fax machine by making a copy. If your copy is faultless the correspondent's fax machine might be defective. Call service if necessary.</p>                                                                                                                                 |
| Faxes are of poor quality.                                                   | <p>The document contains photographs or small print.</p> <p>The document lacks contrast.</p> <p>Your fax machine is faulty.</p> | <p>Change the resolution setting to <b>FINE</b> or <b>PHOTO</b>.</p> <p>Check the document or set a higher contrast with function 47 (see chapter <b>Copier-Scanner-Printer/Contrast</b>).</p> <p>Test the fax machine by making a copy. If your copy is faultless the correspondent's fax machine might be defective. Call service if necessary.</p> |
| Your fax or your recipient's fax machine produces black lines when printing. | <p>There is paper in the sheet feeder.</p> <p>The scanner is dirty.</p> <p>Your fax machine is faulty.</p>                      | <p>Press the lever for paper ejection to the right and remove the paper from the document feed slot.</p> <p>Clean the scanner with a cloth (see <b>Care and maintenance</b>).</p> <p>Test the fax machine by making a copy. If your copy is faultless the correspondent's fax machine might be defective. Call service if necessary.</p>              |
| Your fax machine produces white lines when receiving or copying.             | The cartridge is dirty.                                                                                                         | In function 48, select <b>CLEAN NOW: YES</b> .                                                                                                                                                                                                                                                                                                        |
| <div>CARTRIDGE LOW</div>                                                     | Your ink cartridge is nearly used up.                                                                                           | Get a new ink cartridge.                                                                                                                                                                                                                                                                                                                              |
| The device does not draw the document in during copying or sending.          | Scanner has not clicked in.                                                                                                     | Press both sides of the scanner down until you hear a definite click.                                                                                                                                                                                                                                                                                 |

| Error                                                                                                                          | Possible cause                                                                                                                                     | Remedy                                                                                                                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The scanned copy is printed out with white or black stripes.                                                                   | The scanner was not placed correctly on the document.                                                                                              | Press the scanner firmly against the document or put the document on a flat surface.                                                                                                                                                                          |
| The copy of the scanned document is mirror-inverted.                                                                           | The scanner was moved in the wrong direction.                                                                                                      | Move the scanner in the direction marked with an arrow across the document (symbol on the right side of the scanner).                                                                                                                                         |
| <div>TRANSM. ERROR</div>  <p>Error report</p> | <p>The telephone connection is of poor quality.</p> <p>The recipient has a paper jam or has run out of paper.</p>                                  | <p>Try again or send the fax at reduced speed (function 21).</p> <p>Call your fax partner or try to transmit at a later stage.</p>                                                                                                                            |
| <div>NO CONNECTION</div> <p>or</p> <div>REDIAL FAILED</div>                                                                    | Your fax partner's line is busy, does not answer or a different device like an answering device answers.                                           | Try later or draw your fax partner's attention to a possible installation fault.                                                                                                                                                                              |
| <div>NO LOOP CURRENT</div>                                                                                                     | Improper installation or plug-in of fax machine.                                                                                                   | Check the installation of your fax machine.                                                                                                                                                                                                                   |
| <p>When you lift the receiver of your fax machine you do not hear the dial tone. The display shows</p> <div>NO DIALTONE</div>  | You are connected to a PABX system. You have connected your telephone cable to the socket identified with EXT. TEL.                                | Check the settings in function 15. Connect your telephone cable to the socket on the bottom of your fax machine identified with LINE.                                                                                                                         |
| <div>BUSY</div> <p>or</p> <p>fax transmissions are constantly interrupted.</p>                                                 | Your fax correspondent has a fax machine that cannot receive the usual standard identifying signals.                                               | Try to send the fax manually: press <b>DIAL/Ⓜ</b> and dial the fax number. You will hear the call being established. If the recipient is using an automatic answering device, wait until you hear a tone after the pre-recorded message. Press <b>START</b> . |
| You cannot receive any faxes.                                                                                                  | You have set the number of rings too high for the answering machine or the total number of ringing signals for a device without answering machine. | Set the number of ringing signals for the answering machine or the total number of ringing signals with function 31 or 32 to lower than five.                                                                                                                 |
| You cannot phone or send faxes.                                                                                                | You are operating your fax machine on a private branch exchange and have not set it accordingly.                                                   | In function 15, select<br><b>PABX: YES</b> .                                                                                                                                                                                                                  |

| Error                                                                                                         | Possible cause                                                                                                                                                                          | Remedy                                                                                                                                                                                                                                                                                    |
|---------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| When you receive a phone call, after the first ring your correspondent does not hear the usual ringback tone. | Your correspondent is being informed that the fax machine has taken the call already and that he has to pay charges. Your machine checks whether it is a phone or a fax correspondence. | In function 31 or 32 you can put the tollfree rings to a higher level under <b>FAX RINGS:</b> (see chapter <b>Fax switch</b> / Setting the operating mode).                                                                                                                               |
| Your fax machine rings once, then there is a moment of silence and another ring signal after that.            | This process is perfectly normal!                                                                                                                                                       | You have just noticed how the automatic fax-switch operates. After the first ring signal the fax machine takes over the call. When the fax machine has recognised that the incoming call is a telephone correspondence, the fax machine will continue to ring.                            |
| You do not hear the dial tone when using your cordless telephone.                                             | The connection of your cordless phone might be incorrect.                                                                                                                               | The connection of your cordless phone might be incorrect. Check whether the cordless phone was installed correctly (see chapter <b>Installation</b> / Connecting additional devices).                                                                                                     |
| You cannot transfer calls from the additional phone to the fax machine.                                       | Your auxiliary devices are not set to tone dialling.                                                                                                                                    | For further information as to how you change your device to tone dialling see the instructions of your additional telephones. Otherwise you have not configured your external phones to be in serial with your fax unit (see chapter <b>Installation</b> / Connecting additional devices) |
| Your external answering machine records fax signals but your fax machine does not receive these fax messages. | You have not connected your external answering machine correctly.                                                                                                                       | Connect your answering machine as described in the chapter <b>Installation</b> / Connecting additional devices.                                                                                                                                                                           |
| Copy is blank.                                                                                                | Document loaded the wrong way up.<br><br>Printer or scanner faulty.                                                                                                                     | Load the document with the printed side up.<br><br>Service.                                                                                                                                                                                                                               |
| On lifting the handset you hear a tone or silence.                                                            | The caller is trying to send a fax.                                                                                                                                                     | On the fax machine: press <b>START</b> .<br>On the additional phone: press <b>*</b> and <b>5</b> . Then replace the handset.                                                                                                                                                              |

| Error                                                                                                                                                                                                  | Possible cause                                                                                                                        | Remedy                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| On lifting the handset of an additional telephone you hear in the background some brief tones or, depending on the device type, the activated outgoing message of your own built-in answering machine. | Your additional telephone is connected in parallel.                                                                                   | Press <b>⊗</b> twice to switch off the tones or the outgoing message. You can now make a call without interferences (see chapter <b>Fax switch</b> ).                    |
| Received documents do not appear as normal at the front of the fax machine.                                                                                                                            | Paper jam.                                                                                                                            | Press the lever for paper ejection to the right and pull the paper carefully outwards from the inside.                                                                   |
| <b>Only for fax machines with built-in answering device:</b><br>You have switched on your answering machine and cannot receive any faxes.                                                              | You use background music.<br><br>Your outgoing message is too long.                                                                   | Record a message without music.<br><br>Record a shorter announcement (no longer than 20 seconds).                                                                        |
| <b>CHECK PAPER</b>                                                                                                                                                                                     | One sheet or more sheets of paper were not drawn in straight.<br><br>Too many sheets inserted (more than 50 sheets).<br><br>No paper. | Press the lever for paper ejection to the right and pull the paper carefully outwards from the inside. Press <b>START</b> .<br><br>Insert paper and press <b>START</b> . |
| <b>DOCUMENT JAM</b>                                                                                                                                                                                    | One document was not drawn in straight or more documents were both drawn in at the same time.                                         | Remove the scanner and pull the paper carefully outwards.                                                                                                                |
| <b>EXTERNAL PHONE</b>                                                                                                                                                                                  | You are now using an additional telephone.                                                                                            | This is not a fault!                                                                                                                                                     |
| <b>WRONG CARTRIDGE</b>                                                                                                                                                                                 | Wrong cartridge inserted.                                                                                                             | Please use only the original Philips ink cartridges PFA 421 and PFA 424.                                                                                                 |

## Service code

! Only use this function when absolutely necessary. If you are satisfied with your changes to the factory settings you should not use this function.

Function 45 (Service code) is used to delete some or all of your changes to the factory settings. This function enables you to partially or fully reconfigure your device. It is especially helpful if you have modified settings but find that your fax machine does not respond as expected.

After deleting some or all of your custom settings please rerun Easy Install.

The following codes are at your disposal:

### Code No. 7117

This code erases all your modifications to the factory settings. The fax machine will therefore react in exactly the same way as on first installation.

### Code No. 7140

When you enter this code, all your entered settings and data will be erased, except for:

- your personal outgoing message on your built-in answering machine
- received messages
- stored short dial numbers
- stored telephone book numbers
- your name
- your telephone number

### Example for using a service code:

- 1 Select MENU **④⑤** and press OK. Enter the service code (7117 or 7140). Press OK.
- 2 With **◀/▶** you can select whether you really want to delete your settings. Confirm with OK. Your fax machine will be reset to its original configuration.


## Care and maintenance

! Before opening the fax machine, make sure that you are electrically discharged by e.g. touching the metal housing of a grounded appliance, a water pipe or radiator.


! Use a soft, fluff-free cloth lightly moistened with a little alcohol (96%). You can also use a special cloth for cleaning fax machines, which is available on the market. Do not allow any moisture to penetrate inside the device.

## Clean the scanner glass

- 1 Carefully remove the scanner by pulling it upwards on both sides.

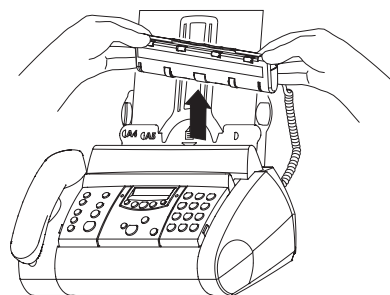

- 2 Place the scanner in front of you with the scanning glass surface face up.

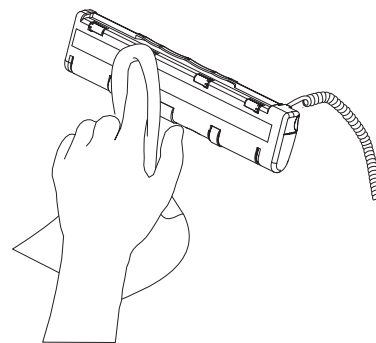

- 3 Gently wipe the glass surface with a soft cloth.
- 4 Before you re-install the scanner, also wipe the scanner compartment.

# Cartridge

## Clean and align the cartridge

If the quality of printed documents deteriorates, the cartridge should be cleaned and correctly aligned.

1 Select Function 48, by pressing MENU, ④⑧ and OK.

2 Use ◀/▶ to select:

CLEAN NOW: YES

3 Confirm with OK.

4 To align the cartridge, select:

ALIGN: YES


5 The fax machine prints out a test page with different values. Select with ◀/▶ the value where the lines are parallel.

NEW VALUE: 08


6 Press OK.

If even now the printing quality is still not satisfactory, you need to clean the cartridge manually:

1 Release the cartridge from its holder and clean the contacts (A) with a dry, fluff-free cloth. Clean the nozzles (B) with a damp cloth.

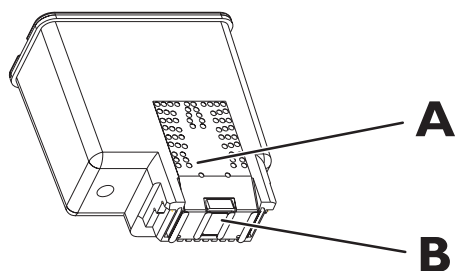

2 Clean the contacts of the holder before reinserting the cartridge.

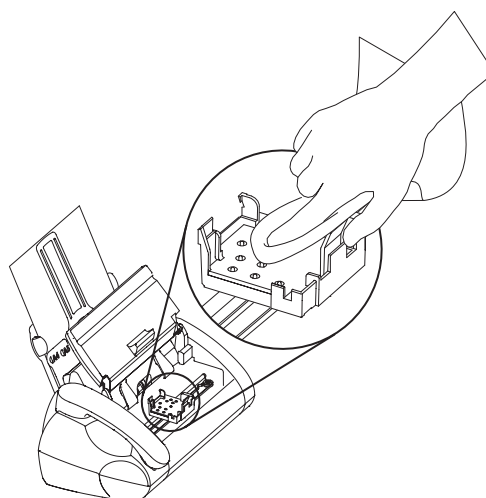

! Never touch the nozzles and contacts with your fingers!

! Avoid shaking the cartridge because this could damage your cartridge.

## New cartridge

If your ink cartridge is empty and you are inserting a new one, you should reset the copy counter.

! Please only use this function when you are actually inserting a new cartridge.

1 Select function 49, by pressing MENU, ④⑨ and OK.

2 Use ◀/▶ to select:

CARTR. NEW: YES

3 Press OK.

4 Use ◀/▶ to select whether you wish to reset the counter. Confirm again with OK.

## Technical data

|                                                                                                                  |                                                                            |                                             |
|------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|---------------------------------------------|
| Compatibility:                                                                                                   | ITU Group 3                                                                |                                             |
| Type of connection:                                                                                              | outside line (PSTN) / extension (PABX)                                     |                                             |
| Flash times:                                                                                                     | other countries:                                                           |                                             |
|                                                                                                                  | outside line (PSTN):                                                       | 100 ms                                      |
|                                                                                                                  | extension (PABX):                                                          | 100 ms                                      |
| Size of document:                                                                                                |                                                                            |                                             |
| width:                                                                                                           | single sheet                                                               | 148 - 217 mm                                |
|                                                                                                                  | several sheets                                                             | 148 - 217 mm                                |
| length:                                                                                                          | single sheet                                                               | 100 - 600 mm                                |
|                                                                                                                  | several sheets                                                             | 148 - 297 mm                                |
| thickness:                                                                                                       | single sheet                                                               | 0.06 - 0.12mm                               |
|                                                                                                                  | several sheets                                                             | 0.07 - 0.15 mm                              |
| Printing paper:                                                                                                  | special paper for ink jet printers<br>A4 210 x 297 mm, 80 g/m <sup>2</sup> |                                             |
| Largest scanning width:                                                                                          | 210 ± 1 mm                                                                 |                                             |
| Resolution:                                                                                                      | horizontal:                                                                | 8 points/mm (200 dpi)                       |
|                                                                                                                  | vertical:                                                                  | standard 3.85 lines/mm<br>FINE 7.7 lines/mm |
| Photo mode:                                                                                                      | 16 grey tones                                                              | (fax without TAM)                           |
|                                                                                                                  | 64 grey tones (fax with TAM)                                               |                                             |
| Contrast control:                                                                                                | automatic and manual                                                       |                                             |
| Copying:                                                                                                         | FINE and PHOTO resolution                                                  |                                             |
| Data compression:                                                                                                | MH, MR                                                                     |                                             |
| Modulation:                                                                                                      | V29bis, V27ter, V2, V17*                                                   |                                             |
| Sound power level:                                                                                               | stand by mode:                                                             | <30 dBA                                     |
|                                                                                                                  | copy mode:                                                                 | <53 dBA                                     |
| Printing method:                                                                                                 | bubble inkjet                                                              |                                             |
|                                                                                                                  | black and white or 3 colours                                               |                                             |
| Document feed:                                                                                                   | up to 10 letters (80 g/m <sup>2</sup> )                                    |                                             |
| Fax switch:                                                                                                      | DAY/NIGHT/TIMER                                                            |                                             |
| Dimensions:                                                                                                      | 350 x 217 x 170 mm (without paper tray)                                    |                                             |
| Weight:                                                                                                          | about 3,8 kg                                                               |                                             |
| Power consumption:                                                                                               | stand by:                                                                  | about 2 W                                   |
|                                                                                                                  | telephoning:                                                               | about 5 W                                   |
|                                                                                                                  | sending a standard letter:                                                 | ca. 20 W                                    |
|                                                                                                                  | receiving a standard letter:                                               | ca. 35 W                                    |
| Power supply:                                                                                                    | 220-240 V / 50-60 Hz                                                       |                                             |
| Speech recording time:                                                                                           | up to 25 minutes                                                           |                                             |
| Speech output:                                                                                                   | yes*                                                                       |                                             |
| Allowed operating environment:                                                                                   | temperature:                                                               | 5 - 40 °C                                   |
|                                                                                                                  | relative humidity:                                                         | 15 - 85 % RH                                |
|                                                                                                                  | not condensing                                                             |                                             |
| Recommended operating environment in use:                                                                        | temperature:                                                               | 17 - 28 °C                                  |
|                                                                                                                  | relative humidity:                                                         | 20 - 80 % RH                                |
|                                                                                                                  | not condensing                                                             |                                             |
| Recommended operating environment in unplugged status (ready for operation with loaded ink cartridge and paper): | temperature:                                                               | 0 - 45 °C                                   |
|                                                                                                                  | relative humidity:                                                         | 15 - 85 % RH                                |
|                                                                                                                  | not condensing                                                             |                                             |
| Interference suppression:                                                                                        | emission:                                                                  | corresponding to<br>EN 55022 class B        |
|                                                                                                                  | immunity:                                                                  | corresponding to<br>EN 50082-1 and EN55024  |

## Glossary

*additional device, additional telephone:* You can operate your fax machine together with additional devices such as (cordless) telephones, an answering machine etc. on a single telephone line. You have to enter some specific settings.

*calling line identification:* When you receive a telephone call, the number of the calling party will be shown on the display (not supported by all network providers).

*memory:* Messages of the built-in answering machine as well as fax messages that had not been printed will be stored in this memory.

*DTMF:* short for "Dual Tone Multiple Frequency". With this signal you can start fax reception from an additional telephone which has tone dialling.

*fax switch, automatic and manual receive:* The fax switch analyses incoming calls and detects whether it is a normal call or a fax call. If you have chosen automatic receive a fax will be received automatically and silently. If you have chosen manual receive, the fax switch is not operating and faxes can only be received by pressing **START**.

*Hook-Flash-Function:* The **R** key enables you to use additional services that are provided by your telephone company.

*bubble inkjet:* Printer technology in which ink from a cartridge is heated and transferred onto paper; also referred to as bubble inkjet technology.

*ITU:* International Telecommunication Union, which also sets standards.

*outgoing message (OGM):* As a factory setting an outgoing message is recorded. When your answering machine is switched on the caller hears this message followed by a beep tone.

*paper:* Standard A4-Paper 210x297 mm, 80 g/m<sup>2</sup>

*parallel:* Your connection is parallel, if you make a call with another telephone and your fax machine does not respond as described under "serial" (see *serial*).

*polling:* You can collect documents which have been prepared for collection at a remote fax machine.

*private branch exchange (PABX):* Private branch exchange systems are common in most large companies. They provide a kind of internal telephone network. In order to connect to the public network you must first dial an outside line.

*pulse dialling:* The old dialling mode is pulse dialling. Every number key has a specific number of pulses assigned to it.

*scanner:* input device for copying and faxing documents

*sender identification:* On most fax machines the name and the number of the user can be entered. This so-called sender identification will be printed on the fax receipt and will also appear on the display of the fax correspondent's machine.

*serial:* Your connection is serial, if you make a call from another telephone and at the same time the red display lamp flashes and the display shows **EXTERNAL PHONE** (see *parallel*).

*TAM:* telephone answering machine

\* only with built-in answering machine



## A

- Access code 29
- Additional devices 1
  - Connection 11
- Additional telephone 20
- ALT key 6
- Answering machine 1
  - Switch on and off 27
  - Volume 27
- Auto mode 27

## B

- Basic functions 14

## C

- Call
  - Making 19
- Call transfer 20
- Call waiting 19
- Calling line Identification 20
- Calling line identification
  - Definition 36
- Cartridge
  - changing 9
  - cleaning 35
  - inserting 9
- Cartridge colour
  - changing to a new one 10
- CD-Rom
  - for connection to the PC 4
- CE mark 40
- Changing the cartridge empty 9
- Circular send 21
- Clean the cartridge 35
- Cleaning
  - Resetting the counter 35
- CLEAR 6
- Clear key 27
- CLID 20
- Clock 1
- Code
  - Access code 29
  - Service 34
  - VIP code 28
- Commands for remote control 29
- Compatibility 36
- Completely silent operation 17
- Compression
  - Data 36
- Computer 13
  - connection 13
  - connection and installation 13
- Computer connection requirements 13
- Confirmation tone 29
- conformity
  - declaration 37

## Connection

- Additional devices 11
  - to the same socket 11
- ISDN 12
- PABX 12
- Parallel 36
- Serial 36
- Type 36
- Consumption (power) 36
- Contrast 26
- Controls
  - location 6
- Conversation
  - Record 28
- Copy key 24
- Copying 24
- Cordless telephone 1
- Correct
  - Entries 19, 20
- Correction 14, 19

## D

- Data
  - Technical 36
- Data compression 36
- Date 14
- Day 1, 14, 18
- Day mode 16
- declaration of conformity 37
- Delayed send 23
- Delete
  - Entries 20
  - Message 27
  - Numbers 19
- Description
  - Machine 4
- Dial key 19
- Dimensions 36
- Display 5
  - Language 15
- Display lamp 6
- Document
  - Feed in 21
- Document support 10
- DTMF
  - Explanation 36
- Duration
  - Recording 27
- Duration of recording 27

## E

- Easy Install 11
- EASYLINK 17
- Entering
  - Name 14
  - Number 14
- Environment protection 40
- Error report 22
- EU guidelines 40
- External memo 28

## F

- Fax
  - Journal 22
- Fax message
  - Receiving 1
  - Sending 1

## Fax reception

- Paperless 23
- Fax switch 1, 16, 36
- Faxes
  - Send 21
- Feed in
  - Document 21
- Fine key 24
- Fine setting 24
- Flash times 36
- Function
  - Overseas 22
- Function list 14
- Functions
  - general view 5

## G

- General view
  - functions 5
- Glossary 36
- Grey tones 36
- Guarantee 2

## H

- Hands-free operation 20
- Handset
  - Dial/Mic key 19
  - Mute 20
- Help function 14
- Help key 1, 11, 14
- Hook-Flash-Function 36

## I

- i
  - key 11, 14
- Image quality 22
- index 37
- Inserting
  - cartridge 9
- Instructions
  - Care and maintenance 34
- Interference suppression 36
- Internal memo 28
- International guarantee 2
- ISDN 12
- ITU 36

## J

- Journal 22

## L

- Lamp
  - for answering device 6
- Language
  - Display 15
- Lever for paper ejection 4, 11
- Line 8
- List
  - Telephone numbers 20
- List of telephone numbers 20
- Print 20
- Load
  - paper 10
- Location 8
- Location of controls 6
- Loudspeaker 20
- Volume 15

## M

- Machine
  - Description 4
  - Overview 4
- Manual fax reception 17
- Memo 28
- Menu key 14
- Message 27
  - Delete 27
- Microphone 20
- Mode
  - Day (Sun) 18
- Modulation 36
- Month 14
- Moon (symbol) 16
- Mute 20

## N

- Name
  - Entering 14
- New cartridge 35
- Night 1
- Night mode 16
- Number
  - Entering 14
- Numbers
  - Delete 19

## O

- Online help 26
- Other devices 20
  - Connection 11
- Overseas function 22
- Overview
  - Machine 4

## P

- PABX 12
  - Explanation 36
- Packaging 40
- Paper
  - Format 22
  - Paper jam 11
  - Size 36
- Paper ejection lever 4
- Paper format 36
- Paper jam 11
  - lever for paper ejection 11
- Paper support
  - stick paper support insertion 10
- Paper tray 10
- Paperless
  - Fax reception 23
- Parallel 11
  - Connection 36
- PC
  - connection 13
  - Scanning into the PC
  - Printing out of the PC 26
- Photo key 24
- Photo mode 36
- Photo setting 24
- Play back volume 27
- Play key 27
- Polled reception 22

- Polling
  - Explanation 36
  - Quick 22
  - Send 23
- Polling with code 22
- Power consumption 36
- Power supply 36
- Print
  - List of telephone numbers 20
- Printing
  - out from the PC 26
- Private branch exchange 12
- Pulse dialling
  - Explanation 36
- R**
- R key 6, 19
- Receive
  - Automatic 36
  - Manual 36
- Record 27
  - Conversation 28
- Record key 27, 28
- Recording
  - Duration 27
- Recording time 27
- Recycling 40
- Redial 6, 19
- Remote control 29
- Report
  - Error report 22
  - Transmission report 22
- Resolution 24
  - Technical data 36
- Ring signal 15
  - Type 15
  - Volume 15
- Ringing
  - Despite answering device 28
- S**
- Safety instructions 2
- Scanning 24
- Scanning into the PC 25
- Send
  - Delayed 23
  - Faxes 21
- Sender identification
  - Explanation 36
- Serial 11
  - Connection 36
- Service 2
- Service code
  - Use 34
- Setting
  - Day mode 16
  - Night mode 16
- Shift key 6
- Short dial 6, 19
- Silent fax reception 17
- Size
  - Document 36
- Size compression 22
- Space key 6
- Special settings 17
- START 6
- STOP 6
- Storing numbers 19
- Sun (symbol) 16, 18
- T**
- TAM
  - Explanation 36
- Technical data 36
- Telephone 19
  - Record a conversation 28
- Telephone book 6, 19
  - List of numbers 20
- Telephone cable 8
- Telephone numbers
  - List 20
- Time 14, 23
- Timer 1, 5, 16
- Timer mode
  - Activate 17
  - Check 17
  - Configure 17
  - Deactivate 17
- Tipps 30
- Toggling calls 19
- Transmission report 22
- Transmission speed 36
- V**
- VIP code 28
- Volume 27
  - Loudspeaker
  - Ring signal 15
- W**
- Weight 36
- Y**
- Year 14

## DECLARATION OF CONFORMITY

We,

ÖSTERREICHISCHE PHILIPS INDUSTRIE GMBH, Internet Fax Appliances  
Gutheil-Schoder-Gasse 10  
A-1102 Wien, Österreich

declare under our sole responsibility that the product

Plain paper Fax

### PHILIPS IPF 144

to which this declaration relates is in conformity with the following standard(s) or other normative document(s):

\*\*\*\*\*

Safety:

EN 60950:1992 + A1:1993 + A2:1993 + A3:1995 + A4:1997 + A11:1997

Electromagnetic Compatibility:

EN 55022:1998 class B, EN 50082-1:1997, EN 55024:1998

\*\*\*\*\*

following the provisions of the Directive 1999/5/EC on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity.

Wien, 2001-02-06



Paul SANDBERG  
Managing Director

## DECLARATION OF CONFORMITY

We,

ÖSTERREICHISCHE PHILIPS INDUSTRIE GMBH, Internet Fax Appliances  
Gutheil-Schoder-Gasse 10  
A-1102 Wien, Österreich

declare under our sole responsibility that the product

Plain paper Fax

### PHILIPS IPF 174

to which this declaration relates is in conformity with the following standard(s) or other normative document(s):

\*\*\*\*\*

Safety:

EN 60950:1992 + A1:1993 + A2:1993 + A3:1995 + A4:1997 + A11:1997

Electromagnetic Compatibility:

EN 55022:1998 class B, EN 50082-1:1997, EN 55024:1998

\*\*\*\*\*

following the provisions of the Directive 1999/5/EC on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity.

Wien, 2001-02-06



Paul SANDBERG  
Managing Director



510350618051

5103 506 1805.1 GB (SJ 12/17 P)

1718



The CE mark confirms that the machine corresponds to the relevant guidelines of the European Union.

This product is intended for use on an analogue public switched network (PSTN) and for use in the country indicated on the label of the box. The usage in other countries could cause malfunction.

For further information please contact your national technical support centre.

Initially contact your dealer if problems occur during operation. This operation manual has been printed on chlorine-free, recycled paper, in line with the highest standards of environmental friendliness.

The used cardboard packaging as well as the cardboard protecting your facility at its sides made of waste paper can be recycled like waste paper; corresponding to your country's demands dispose the plastic foils either for recycling or with your rubbish.

This electronic facility contains recyclable material. At the end of use of this facility please inform yourself about the corresponding recycling demands of your country.

Technical changes and errors excepted.

© 2001